



Programming Guide

Advanced 2D Image Scanner

This Programming Guide is intended for:

- **2D Image Handheld Scanner:** Z-3172 Plus, Z-3272 Series
- **2D Image Hands-Free Scanner:** Z-8062, Z-8072
- **2D Image Scan Module:** Z-5652
- **2D Image On-Counter Scanner:** Z-8082

Revision History

Changes to the original manual are listed below:

Version	Date	Description of Version
1.0	2017/01/11	Initial release
1.1	2017/08/23	Fixed errors

Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein nor for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization. We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. All trademarks mentioned herein, registered or otherwise, are the properties of their various, ill, assorted owners.

General Handling Precautions

- Do not dispose the scanner in fire.
- Do not put the scanner directly in the sun or by any heat source.
- Do not use or store the scanner in a very humid place.
- Do not drop the scanner or allow it to collide violently with other objects.
- Do not take the scanner apart without authorization

Guidance for Printing

This manual is in A5 size. Please double check your printer setting before printing it out. When the barcodes are to be printed out for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

Firmware Notice

To use all functions in this guide please update to the latest firmware.

Copyright © 2017 ZEBEX INDUSTRIES INC. All rights reserved.

Table of Contents

Important Notice.....	ii
General Handling Precautions.....	ii
Guidance for Printing	ii
Using the Scanner	1
Beeper Indication.....	1
Settings and Programming	2
Program Set Up Flow.....	2
User Preferences	3
Show Version.....	3
System Settings	3
Customer's Factory Default.....	4
Scan Mode	5
Standby Time for Auto Scan Mode / Continue Scan Mode	7
Same Code Delay Time for Auto Scan Mode / Continue Scan Mode.....	9
Interface Switch.....	10
Good Read Beep On/ Off.....	11
Good Read Beep Length.....	12
Good Read Beep Frequency.....	13
Aiming Pattern	14
Illumination	15
Terminal Character.....	16
RS232 Baud Rate	17
USB Speed	19
Country Code	20
Readable Symbologies	25
All Symbologies	25
UPC-A	26
UPC-E.....	27
EAN-8	28
EAN 13.....	29
Code 128	30
Code 39	31
Code 93	32
Code 32	33
Code 11	34
Codabar.....	35
Plessey.....	36
MSI/Plessy.....	37
Interleaved 2 of 5	38
IATA 2 of 5	39

Matrix 2 of 5.....	40
Straight 2 of 5.....	41
RSS 14.....	42
RSS Expanded.....	43
RSS Limited.....	44
Component CC-A.....	45
Component CC-B.....	46
Component CC-C.....	47
PDF417	48
Data Matrix	50
QR Code	51
Micro QR Code	52
Aztec.....	53
MaxiCode	54
Symbology Features	55
UPC / EAN.....	55
UPC-A	56
UPC-E.....	58
EAN 8.....	60
EAN 13.....	61
Code 39	64
Codabar.....	66
Interleaved 2 of 5	68
MSI / Plessey	70
Code 11	72
Data Matrix	74
QR / Micro QR	76
Aztec.....	78
Data Editing (Prefix)	79
Prefix Set Up Flow	79
All Prefix	80
UPC / EAN Prefix.....	81
Code 128 Prefix	83
Code 39 Prefix	84
Code 93 Prefix	85
Code 32 Prefix	86
Code 11 Prefix	87
Codabar Prefix.....	88
Plessey Prefix.....	89
MSI Prefix	90
Interleaved 2 of 5Prefix	91
IATA 2 of 5 Prefix	92

Matrix 2 of 5 Prefix.....	93
Straight 2 of 5 Prefix.....	94
RSS 14 Prefix.....	95
RSS Expanded Prefix	96
RSS Limited Prefix.....	97
Component CC-A Prefix.....	98
Component CC-B Prefix.....	99
Component CC-C Prefix.....	100
PDF 417 Prefix	101
Micro PDF 417 Prefix.....	102
Data Matrix Prefix	103
QR Prefix	104
Micro QR Prefix	105
Aztec Prefix.....	106
MaxiCode Prefix	107
Data Editing (Suffix).....	108
Suffix Set Up Flow.....	108
All Suffix	109
UPC-A Suffix	110
UPC-E Suffix.....	111
EAN 8 Suffix.....	112
EAN 13 Suffix.....	113
Code 128 Suffix	114
Code 39 Suffix	115
Code 93 Suffix	116
Code 32 Suffix	117
Code 11 Suffix	118
Codabar Suffix	119
Plessey Suffix.....	120
MSI Suffix	121
Interleaved 2 of 5 Suffix	122
IATA 2 of 5 Suffix.....	123
Matrix 2 of 5 Suffix	124
Straight 2 of 5 Suffix	125
RSS 14 Suffix.....	126
RSS Expanded Suffix	127
RSS Limited Suffix	128
Component CC-A Suffix	129
Component CC-B Suffix	130
Component CC-C Suffix	131
PDF-417 Suffix	132
Micro PDF-417 Suffix.....	133

Data Matrix Suffix.....	134
QR Code Suffix.....	135
Micro QR Suffix	136
Aztec Suffix.....	137
MaxiCode Suffix	138
Code Settings	139
Set Lengths for Codes.....	139
Set Lengths for Code 128	141
Set Lengths for Code 39	142
Set Lengths for Code 93	143
Set Lengths for Codabar	144
Set Lengths for Interleaved 2 of 5	145
Set Lengths for Code 11	146
Set Lengths for MSI	147
Set Lengths for Matrix 2 of 5.....	148
Code Identifiers.....	149
Code Identifiers Table	150
Keyboard Caps Lock State	151
Function Key Mapping	152
ASCII Code	153
USB Virtual COM Driver Installing.....	174
JavaPOS Setting	175
JavaPOS	175
JavaPOS Version	176
Install the Java2 Runtime Environment.....	176
Install the Service Object and JavaPOS files.....	176
How to use RS232 scanner with JavaPOS Driver	176
Use barcodes to configure the scanner	177
Running the JavaPOS Test utility	178
How to use JavaPOS driver at your application.....	178
How to use USB scanner with JavaPOS Driver	179
Install the Java RXTXcomm API	180
Running the JavaPOS Test utility	180
How to Use JavaPOS Driver at your application	181

Using the Scanner

Beeper Indication

Beeps	Indication
3 beeps in a series from low to high pitch	Power up
1 short beep	A barcode has been successfully decoded
2 short beeps	The scanner has entered program mode
1 long beep	A setting has been programmed
3 beeps in a series from low to high pitch	The scanner has exited program mode
3 short beeps	Error setting the scanner

Settings and Programming

Scan selected barcodes in this manual to affect setup and programming of your 2D image barcode scanner. Decoding options and interface protocols can be tailored to a specific application.

Setup parameters are stored in non-volatile memory in the scanner and are retained even when power is off. Setup parameters change only when you reset them. You may need to hide adjacent code patches with your hand when scanning.

Program Set Up Flow

Scan "Set" to set up --> Scan selected barcode --> Scan "End" to confirm the setup.

User Preferences

Show Version


Scan this barcode to display firmware version.




Read device information

System Settings


Scan this barcode to return all parameters to the default values.

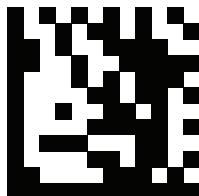

Set

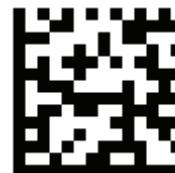


Factory default settings

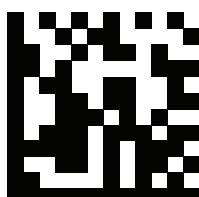

End

Customer's Factory Default

Scan barcodes below to set or delete customer's factory default.

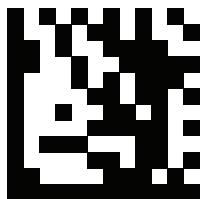


Set



Save customer's factory default



Delete customer's factory default

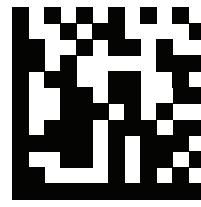

End

Scan Mode


Scan a barcodes below to set the scanner to different modes.

Trigger Mode: The scanner becomes inactive as soon as the data is transmitted by pressing the trigger button.


Presentation Mode: Also called auto trigger mode. The scanner is inactive but will automatically detect barcodes presented in the scan zone and become active.

Auto Scan Mode: The scanner is still active after the data is transmitted but the successive transmission of the same code is not allowed.


Continue Scan Mode: scans periodically non-stop (ex. Scans once a second).

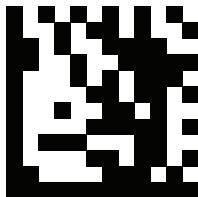


Set

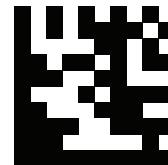


Trigger Mode

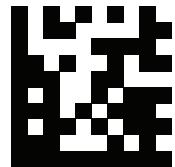

Presentation Mode

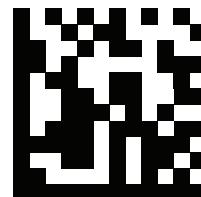

End

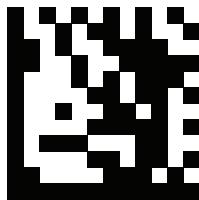


Set



Auto Scan Mode



Continue Scan Mode

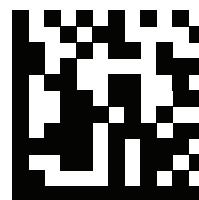


End

Notes:

- **Z-3172 Plus, Z-3272 Series** default: Trigger Mode
- **Z-8072, Z-5652** default: Presentation Mode
- **Z-8062** default: Auto Scan Mode
- **Z-8082** doesn't support this function
- Not all models can support all scan modes

Standby Time for Auto Scan Mode / Continue Scan Mode

Use the barcodes below to set the standby time for Auto Scan Mode and Continue Scan Mode.

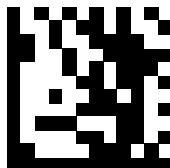

Set




5 minutes (Default)




10 minutes



15 minutes

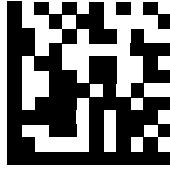

End

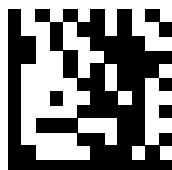

Set




20 minutes




25 minutes



30 minutes

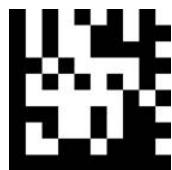


Never

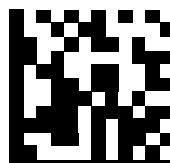

End

Same Code Delay Time for Auto Scan Mode / Continue Scan Mode


Scan a barcode below to select the duration of the delay time for Auto Scan Mode and Continue Scan Mode.

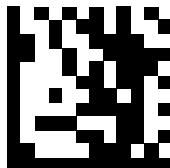

Set




500 msec (Default)

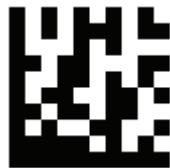


1 sec



1.5 sec

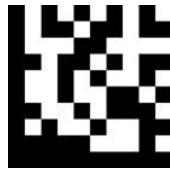


2 sec

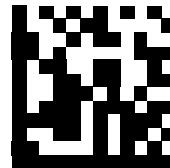


End

Interface Switch


Your 2D Imager supports interfaces such as USB HID, RS232 serial, and USB virtual COM. To switch the interface, simply select the appropriate cable and configure the proper interface by following interface selection.

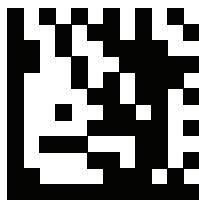


Set

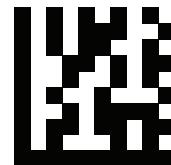

RS-232

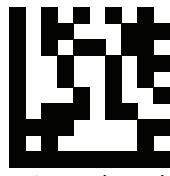


USB Keyboard

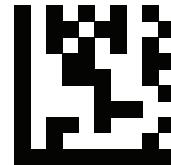

USB Virtual COM Port


*Driver required

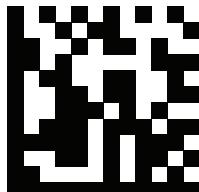

End

Good Read Beep On/ Off

Scan a barcode below to turn on/off good read beep.

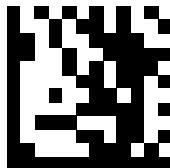


Set



On (Default)




Off

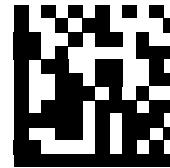

End

Good Read Beep Length

Scan a barcode below to select the duration of the beep signal after a good decode.

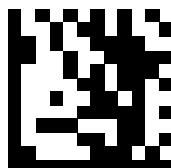

Set



50 msec (Default)




100 msec



150 msec




200 msec

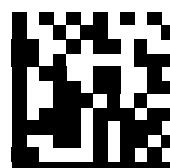


End

Good Read Beep Frequency

Scan a barcode below to select the beep tone of the beep signal after a good decode.

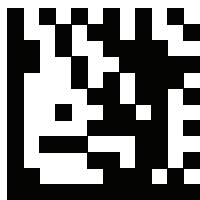


Set

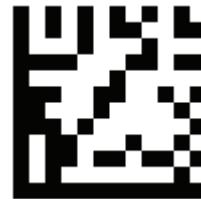


Low



Medium (Default)

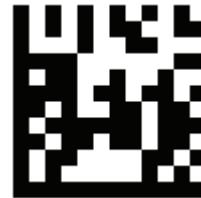


High

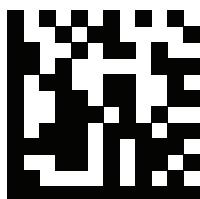

End

Aiming Pattern

Aiming pattern works as an aiming system to aid in barcode reading. Use the following settings to enable or disable this function. This function is for supporting models only.

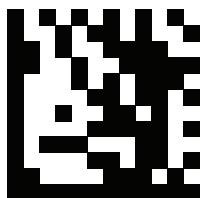

Set




Auto



Always On



Always Off

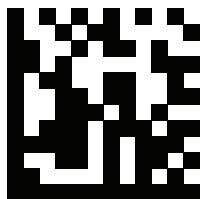


End

Notes:

- Not all models can support this function.

Illumination

Set Illumination to aid in barcode reading. Use the following settings to configure this function.

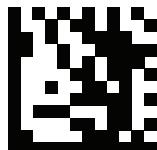

Set




On



Always On



Off

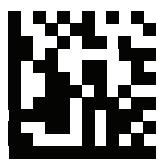


End


Notes:

- Not all models can support this function.


Terminal Character

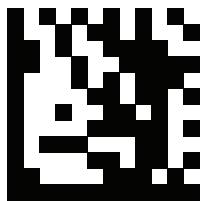


Set

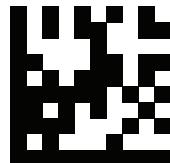


None

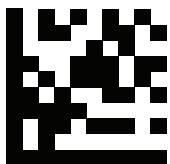


CR/LF (Default)

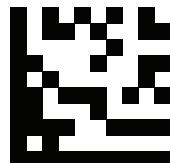

CR

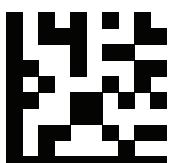


TAB

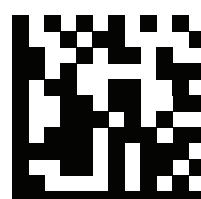


End

RS232 Baud Rate


Baud rate is the number of bits of data transmitted per second. Set the imager's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.

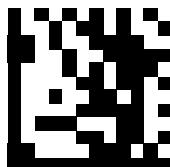


Set

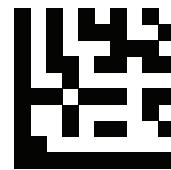


9600

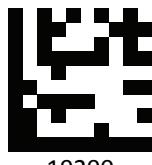


19200

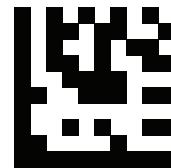


38400

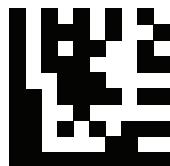


57600

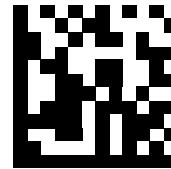


End

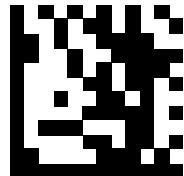

Set

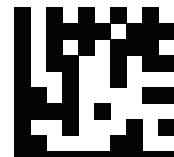


115200 (Default)

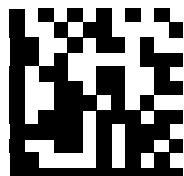

End

USB Speed

Scan a barcode below to set USB speed.

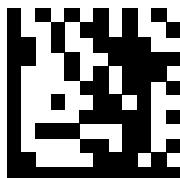


Set



USB 2.0




USB 1.1 (Default)

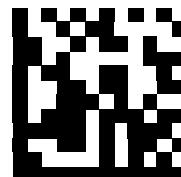

End

Country Code

Scann the following settings to change the country code.

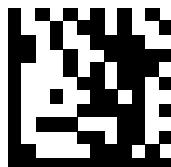

Set



US (Default)




Belgium




Britain




Denmark

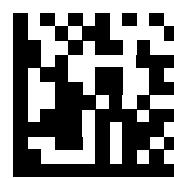


End

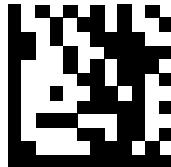

Set

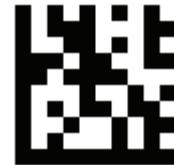

France

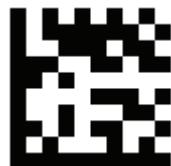


Germany




Italy



Norway

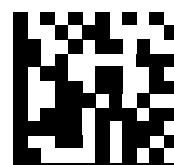

End

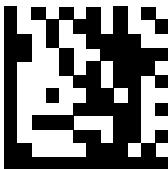

Set



Portugal




Spain




Sweden




Switzerland

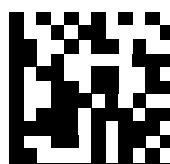

End

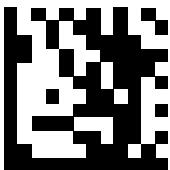


Set

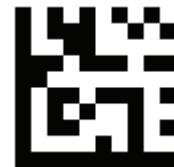

Japan




Hungary

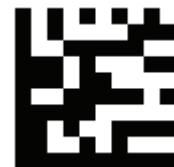


Czech Republic




Slovakia

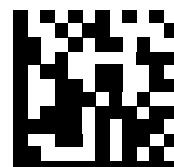

End

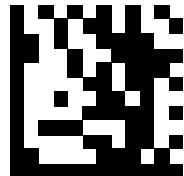

Set

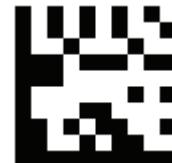


Romania




Croatia



Poland

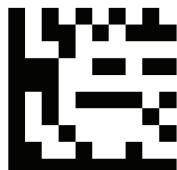

Finland

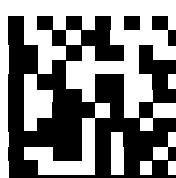


End

Readable Symbologies

This section provides the programming barcodes for enabling and disabling readable symbologies. If the default values suit requirements, programming is not necessary.

All Symbologies

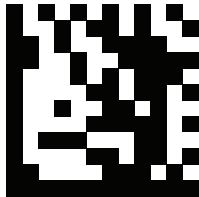


Set



Enable All




Default

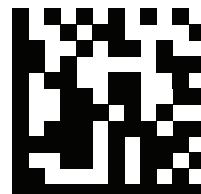

End

UPC-A

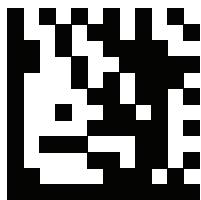


Set




Enable UPC-A (Default)



Disable UPC-A

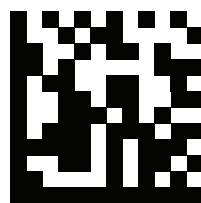

End

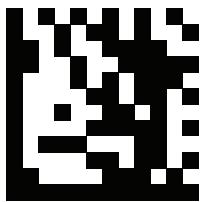UPC-E


Set



Enable UPC-E




Disable UPC-E (Default)

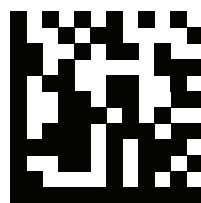

End

EAN-8

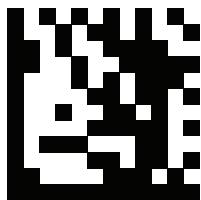


Set




Enable EAN 8 (Default)



Disable EAN 8

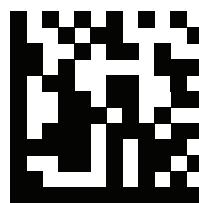

End

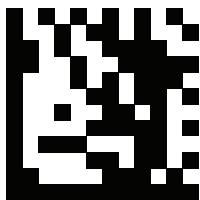EAN 13


Set



Enable EAN 13 (Default)




Disable EAN 13

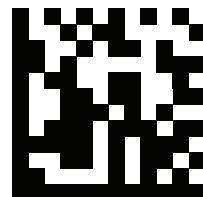

End

Code 128

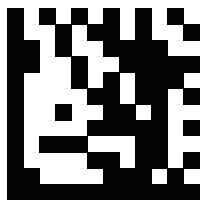


Set




Enable Code 128 (Default)



Disable Code 128

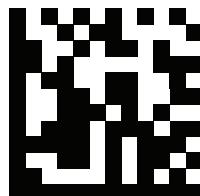

End

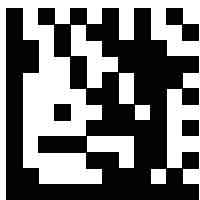Code 39


Set



Enable Code 39 (Default)




Disable Code 39

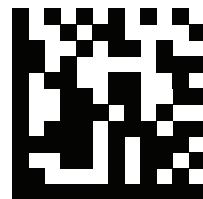

End

Code 93

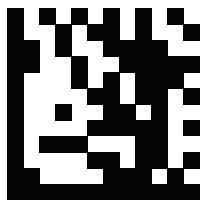


Set




Enable Code 93 (Default)



Disable Code 93

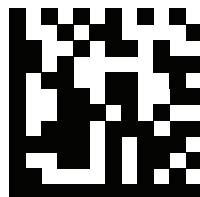

End

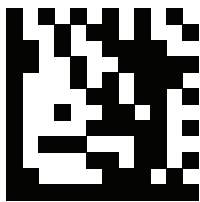Code 32


Set



Enable Code 32




Disable Code 32 (Default)

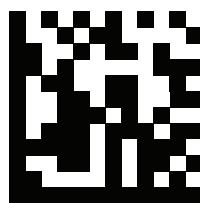

End

Code 11

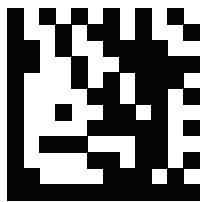


Set




Enable Code 11



Disable Code 11 (Default)

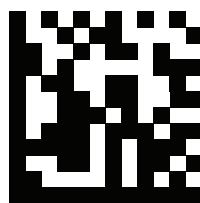

End

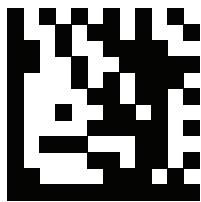Codabar


Set



Enable Codabar (Default)




Disable Codabar

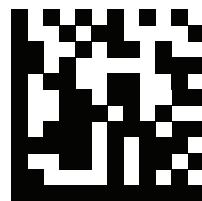

End

Plessey

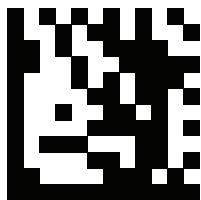


Set




Enable Plessey



Disable Plessey (Default)

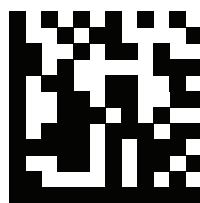

End

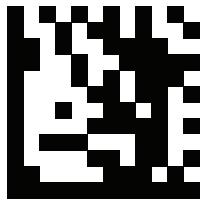MSI/Plessy


Set



Enable MSI/Plessy




Disable MSI/Plessy (Default)

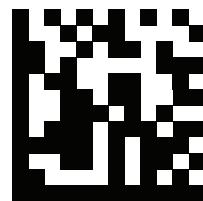

End

Interleaved 2 of 5

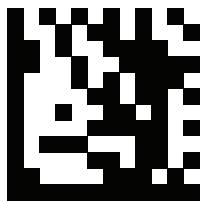


Set




Enable Interleaved 2 of 5 (Default)



Disable Interleaved 2 of 5

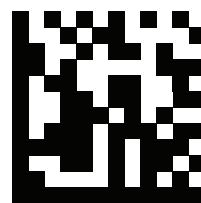

End

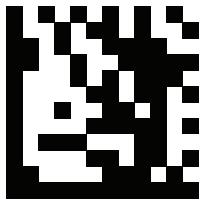IATA 2 of 5


Set



Enable IATA 2 of 5




Disable IATA 2 of 5 (Default)

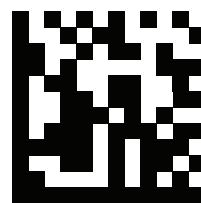

End

Matrix 2 of 5

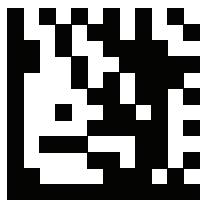


Set




Enable Matrix 2 of 5



Disable Matrix 2 of 5 (Default)

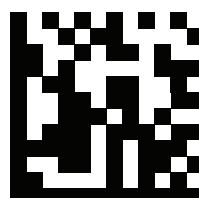

End

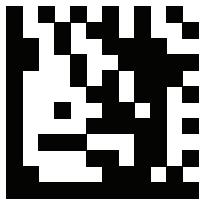Straight 2 of 5


Set



Enable Straight 2 of 5




Disable Straight 2 of 5 (Default)

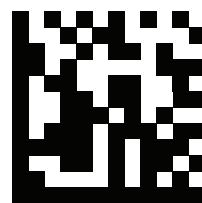

End

RSS 14

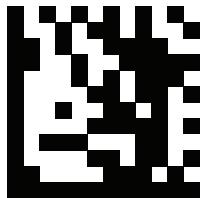


Set



Enable RSS 14 (Default)




Disable RSS 14

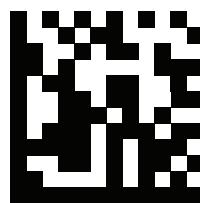

End

RSS Expanded

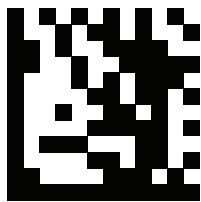


Set



Enable RSS Expanded (Default)




Disable RSS Expanded

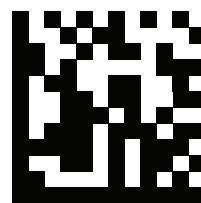

End

RSS Limited

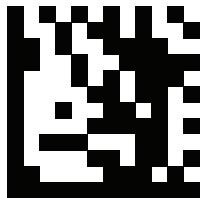


Set




Enable RSS Limited (Default)



Disable RSS Limited

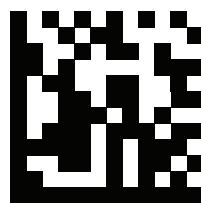

End

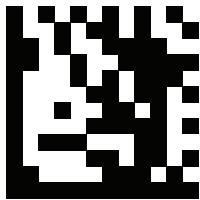Component CC-A


Set



Enable Component CC-A




Disable Component CC-A (Default)

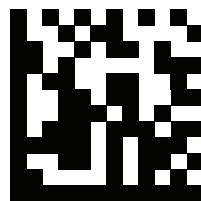

End

Component CC-B

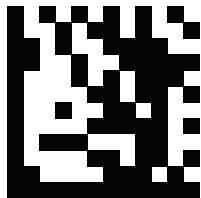


Set




Enable Component CC-B



Disable Component CC-B (Default)

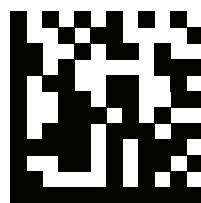

End

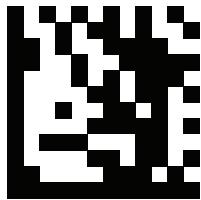Component CC-C


Set



Enable Component CC-C




Disable Component CC-C (Default)

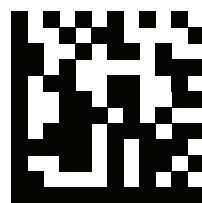

End

PDF417

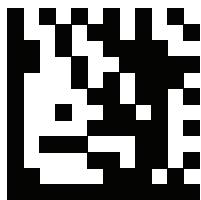


Set



Enable PDF417 (Default)




Disable PDF417

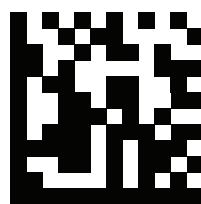

End

Micro PDF417

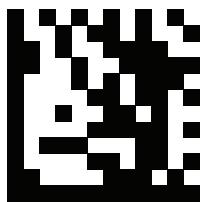


Set



Enable Micro PDF417 (Default)




Disable Micro PDF417

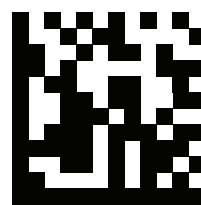

End

Data Matrix

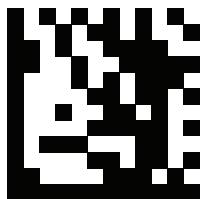


Set



Enable Data Matrix (Default)




Disable Data Matrix

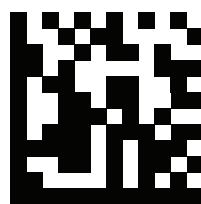


End

QR Code

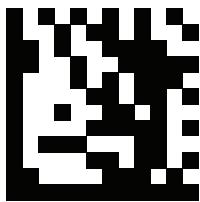


Set

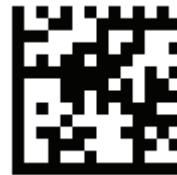

Enable QR Code (Default)




Disable QR Code

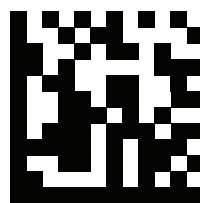


End


Micro QR Code

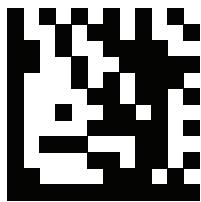


Set

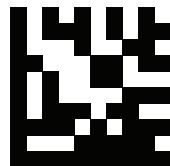


Enable Micro QR Code (Default)

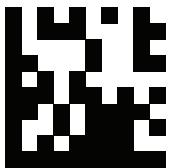

Disable Micro QR Code

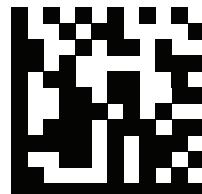

End

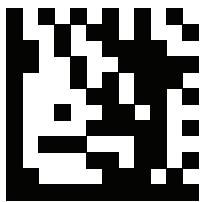Aztec


Set



Enable Aztec




Disable Aztec (Default)

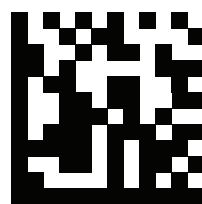

End

MaxiCode

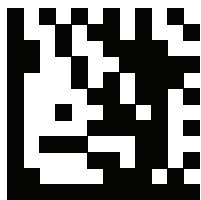


Set



Enable MaxiCode



Disable MaxiCode (Default)

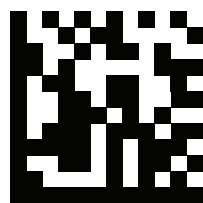


End

Symbology Features

This section provides the programming barcodes for selecting features available to different symbologies.

UPC / EAN

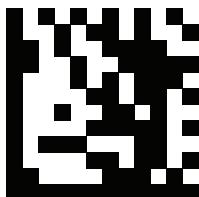


Set



Enable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8




Disable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8 (Default)

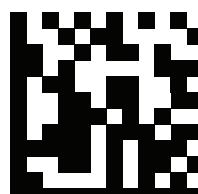


End


UPC-A

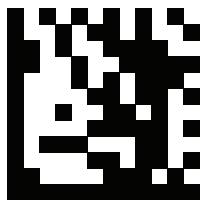


Set

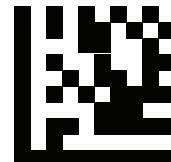


Enable UPC-A Number System digit
(Default)

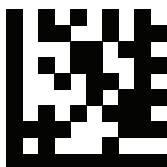


Disable UPC-A Number System digit

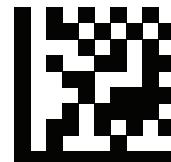


Enable UPC-A check digit (Default)

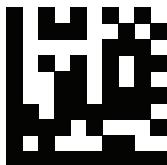


Disable UPC-A check digit

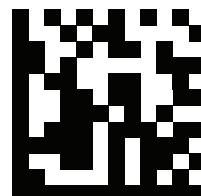



End

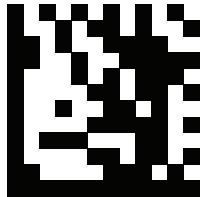

Set

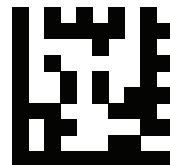


Enable conversion of UPC-A to EAN13

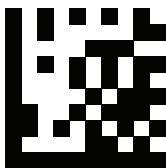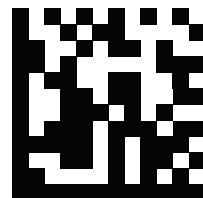
Disable conversion of UPC-A to EAN13
(Default)

End


UPC-E

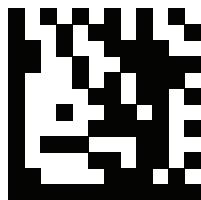


Set

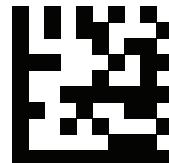


Enable UPC-E Number System digit
(Default)

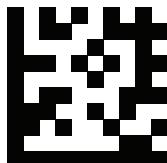


Disable UPC-E Number System digit

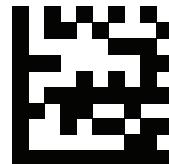


Enable UPC-E check digit (Default)

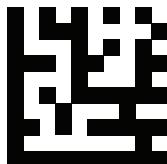


Disable UPC-E check digit

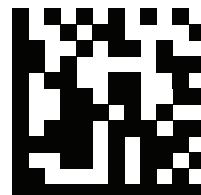



End

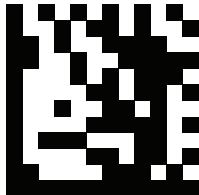

Set

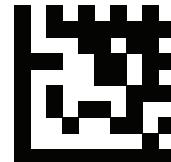


Enable conversion of UPC-E to UPC-A

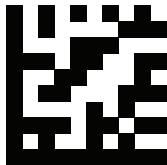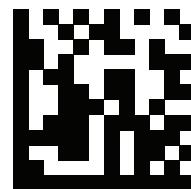
Disable conversion of UPC-E to UPC-A
(Default)

End


EAN 8

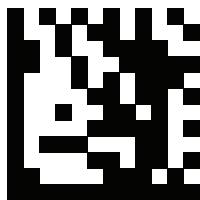


Set

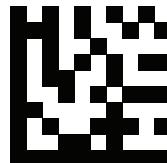


Enable EAN 8 check digit (Default)

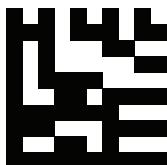


Disable EAN 8 check digit

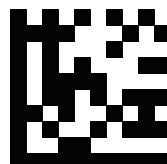


Enable conversion of EAN 8 to EAN 13

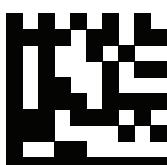


Disable conversion of EAN 8 to EAN 13
(Default)

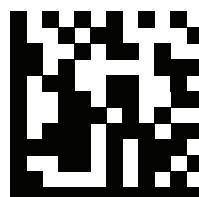


End

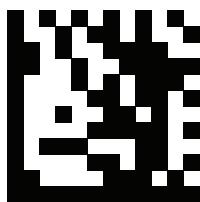EAN 13


Set

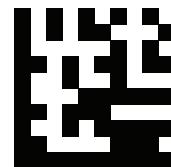



Enable EAN 13 check digit (Default)

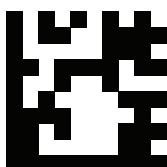


Disable EAN 13 check digit

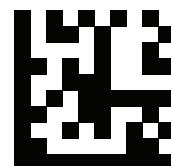


Enable conversion of EAN 13 to ISBN

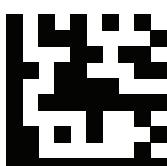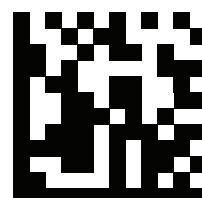Disable conversion of EAN 13 to ISBN
(Default)


End

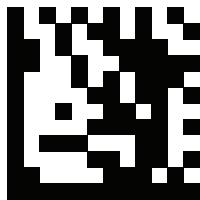


Set

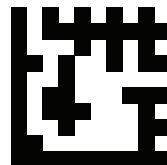


Enable conversion of EAN 13 to ISSN

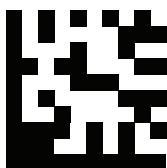


Disable conversion of EAN 13 to ISSN
(Default)

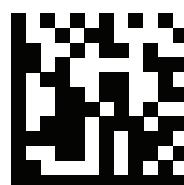



End

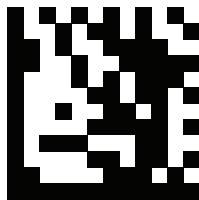

Set

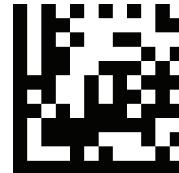


EAN 13 data redundant check = off

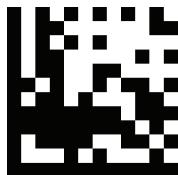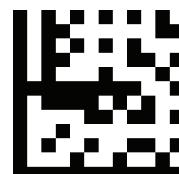EAN 13 data redundant check = 1
(Default)

EAN 13 data redundant check = 2




EAN 13 data redundant check = 3

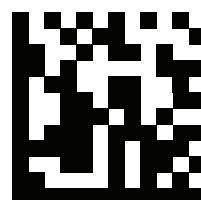


End


Code 39

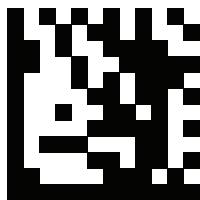


Set

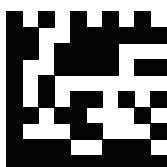


Disable Code 39 full ASCII mode (Default)

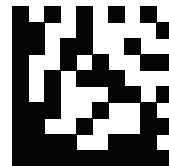


Enable Code 39 full ASCII mode

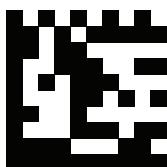


Disable Start and Stop characters (Default)

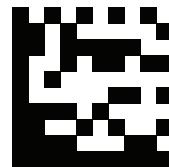


Enable Start and Stop characters

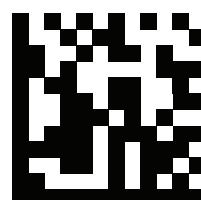




End

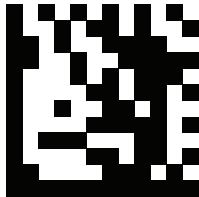

Set

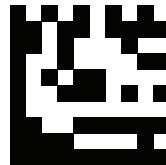


Disable Checksum (Default)

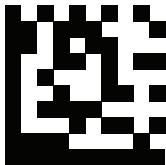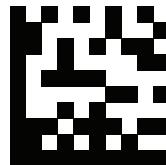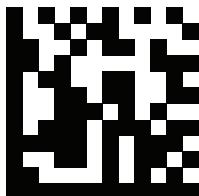
Enable checksum and send check
characterEnable checksum and strip check
character

End


Codabar

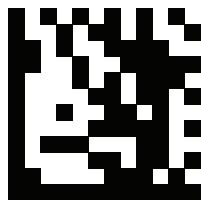


Set

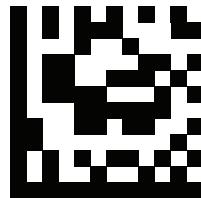


Disable Checksum (Default)

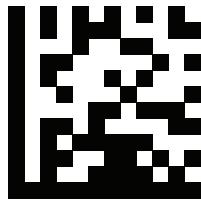


Enable checksum and send check
character

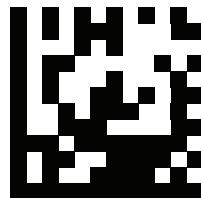


Enable checksum and strip check
character

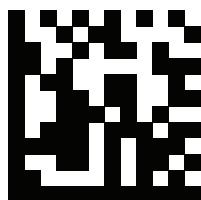



End

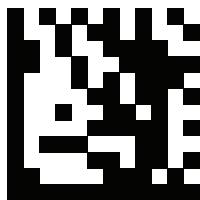

Set

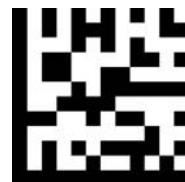


Enable stripping Start and Stop characters

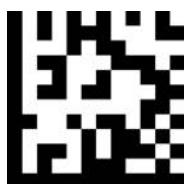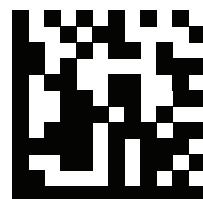
Disable stripping Start and Stop characters
(Default)

End


Interleaved 2 of 5

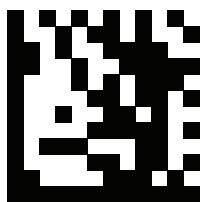


Set

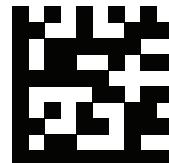


Disable Checksum (Default)

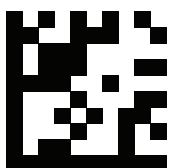


Enable checksum and send check
character

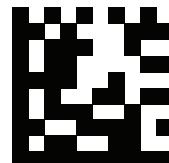


Enable checksum and strip check
character

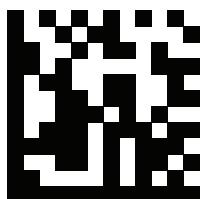


End

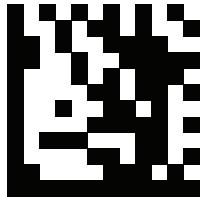


Set

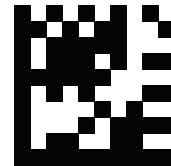

Default quiet zone checking
No length checking performed (Default)

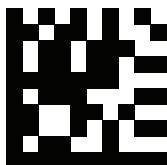


Smaller quiet zone allowed

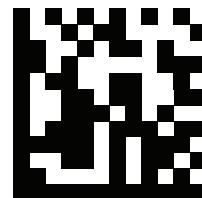


End


MSI / Plessey

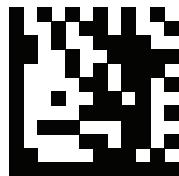


Set

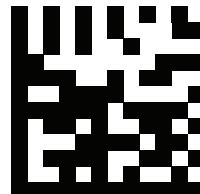


Disable MSI Plessey checksum

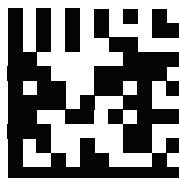


Mod 10 checksum (Default)

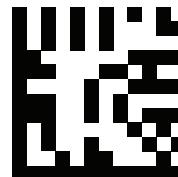


Mod 10/10 checksum

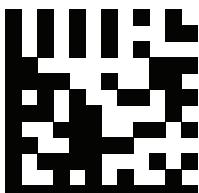


Mod 11/10 checksum

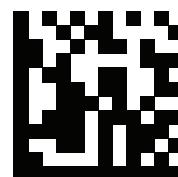


End

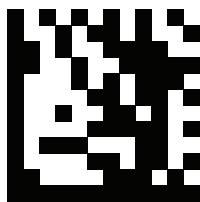


Set

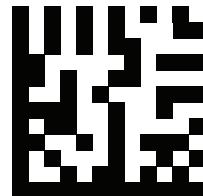

Output checksum character(s) (Default)

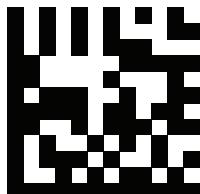


Strip checksum character(s)

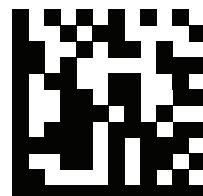


End


Code 11

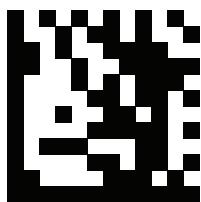


Set

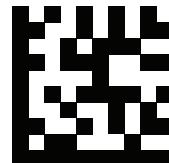


Output checksum character(s)

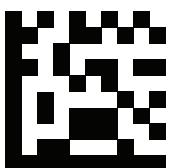


Strip checksum character(s) (Default)

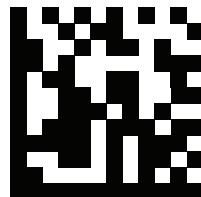


End

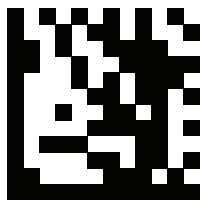



Set

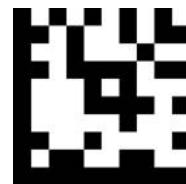

Disable checksum checking

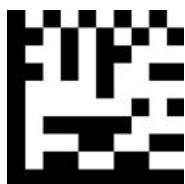


Enable 1-digit checksum checking

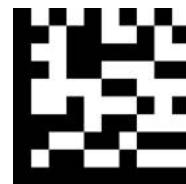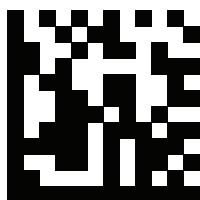
Enable 2-digit checksum checking
(Default)

End


Data Matrix

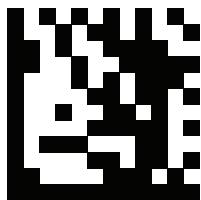


Set

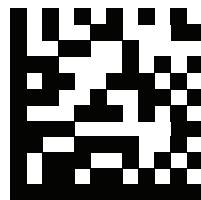


Enable mirror decoding (Default)

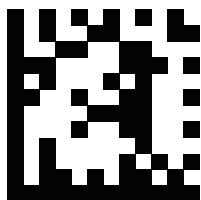


Disable mirror decoding

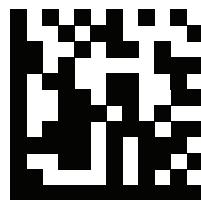



End

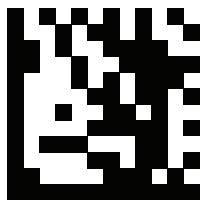

Set

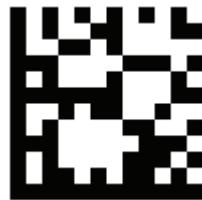


Enable rectangular Data Matrix decoding

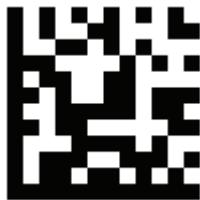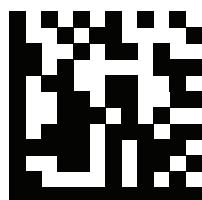
Disable rectangular Data Matrix decoding
(Default)

End


QR / Micro QR

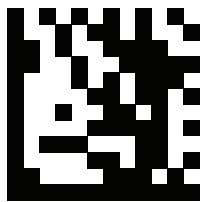


Set

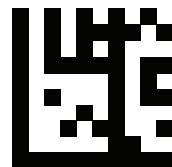


Enable mirror decoding (Default)

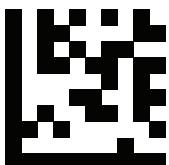

Disable mirror decoding

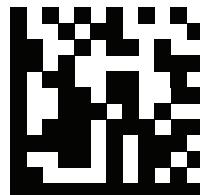

End

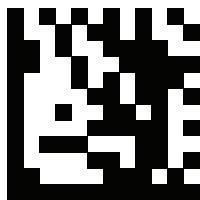


Set



UTF8 conversion for word only




Universal UTF8 conversion (Default)

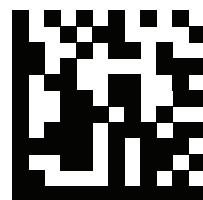


End

Note: Please install QR_UTF8_Conversion executable file before using this function.


Aztec

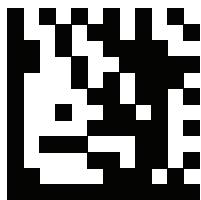


Set

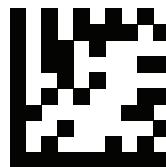

Enable mirror decoding (Default)

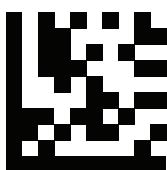

Disable mirror decoding

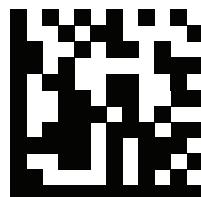

End

Data Editing (Prefix)


Prefix is additional characters that can be sent before the scanned data. Please scan the barcodes in the selection below to set your prefix.

Prefix Set Up Flow


1. Scan Set.
2. Enable barcode type.
3. Scan prefix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.

Ex. If we wish to add “3” as prefix for all barcode type, then follow procedure as below, Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX. At the end, we scan [End] to completed setup.


All Prefix

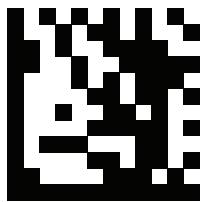


Set

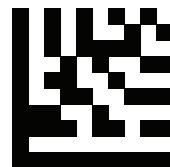


Enable All

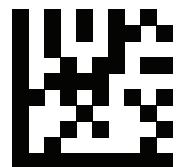


Disable All (Default)

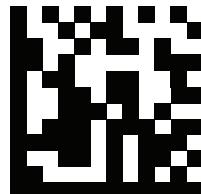


End

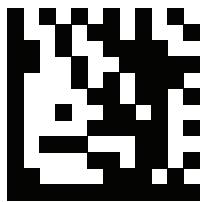UPC / EAN Prefix


Set

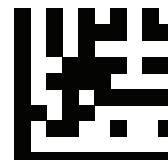


Enable UPC-A

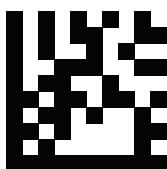


Disable UPC-A

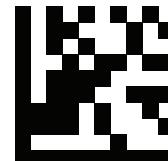


Enable UPC-E

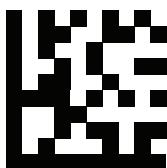


Disable UPC-E

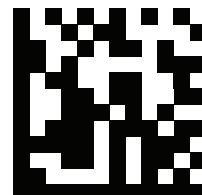


End

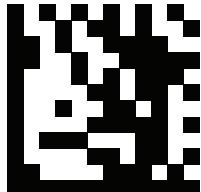


Set

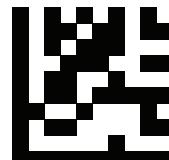


Enable EAN 8

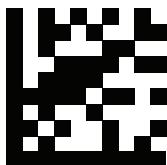


Disable EAN 8

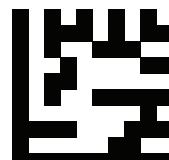

Enable EAN 13

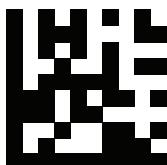


Disable EAN 13

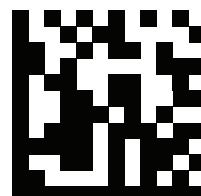


End


Code 128 Prefix

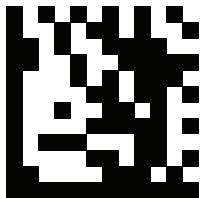


Set

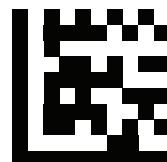

Enable Code 128

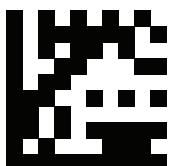


Disable Code 128

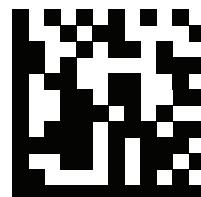


End


Code 39 Prefix

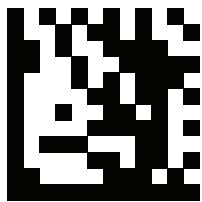


Set

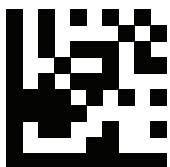

Disable Code 39

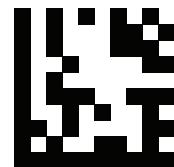


Enable Code 39

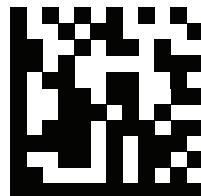


End


Code 93 Prefix

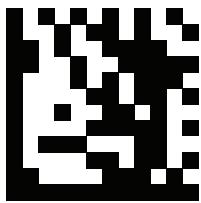


Set

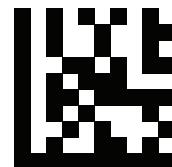

Enable Code 93

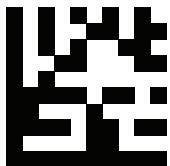


Disable Code 93

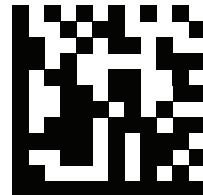


End


Code 32 Prefix

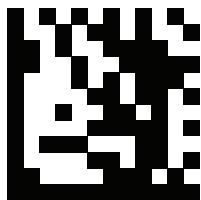


Set

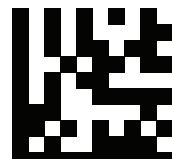

Enable Code 32

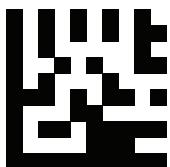


Disable Code 32

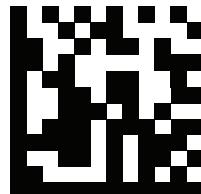


End


Code 11 Prefix

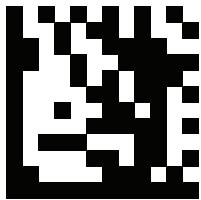


Set

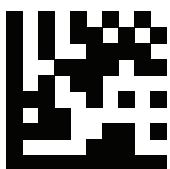

Disable Code 11

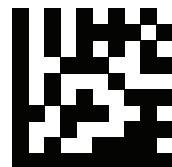


Enable Code 11

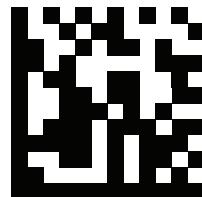


End


Codabar Prefix

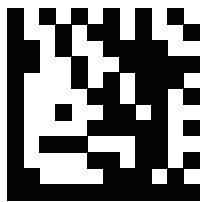


Set

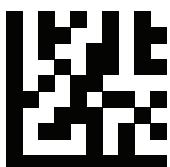

Disable Codabar

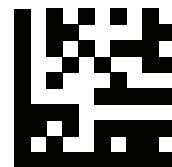


Enable Codabar

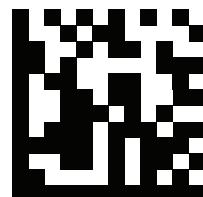


End


Plessey Prefix

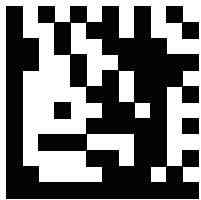


Set

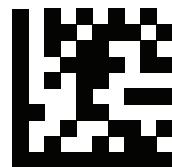

Enable Plessey

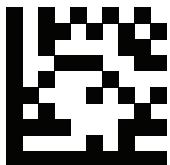


Disable Plessey

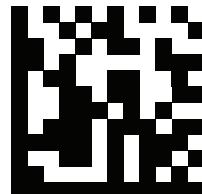


End


MSI Prefix

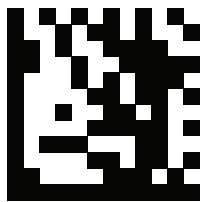


Set

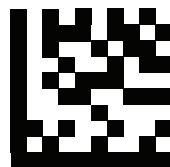


Enable MSI

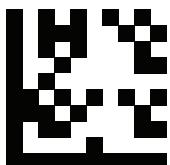


Disable MSI

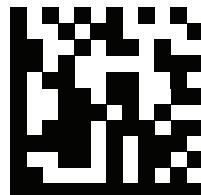


End

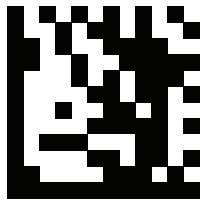Interleaved 2 of 5 Prefix


Set

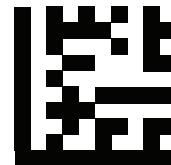

Enable Interleaved 2 of 5

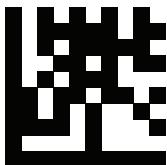


Disable Interleaved 2 of 5

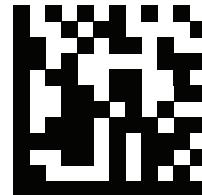


End


IATA 2 of 5 Prefix

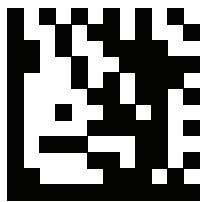


Set

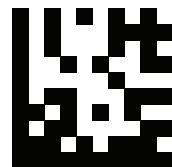


Enable IATA 2 of 5

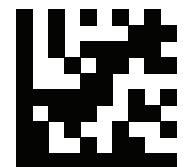


Disable IATA 2 of 5

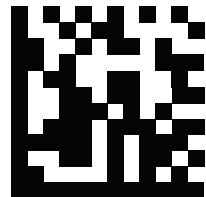


End

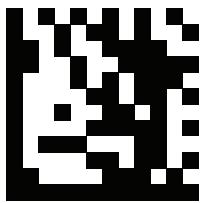Matrix 2 of 5 Prefix


Set

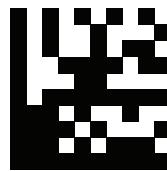

Enable Matrix 2 of 5

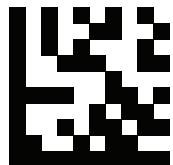


Disable Matrix 2 of 5

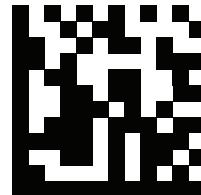


End


Straight 2 of 5 Prefix

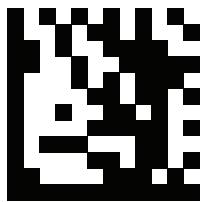


Set

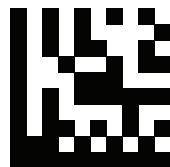

Enable Straight 2 of 5

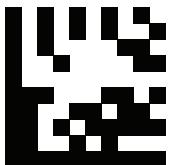


Disable Straight 2 of 5

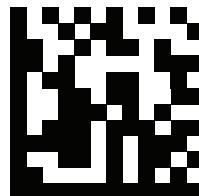


End


RSS 14 Prefix

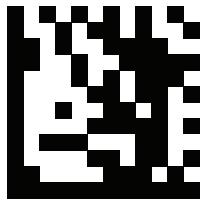


Set

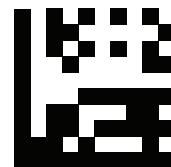

Enable RSS 14

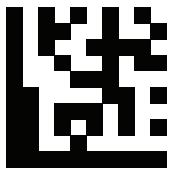


Disable RSS 14

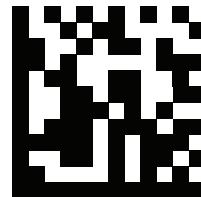


End


RSS Expanded Prefix

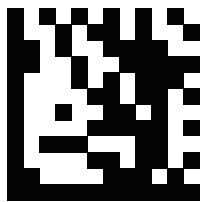


Set

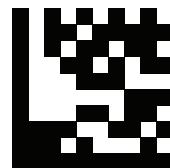

Enable RSS Expanded

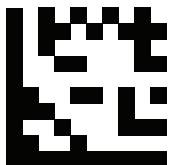


Disable RSS Expanded

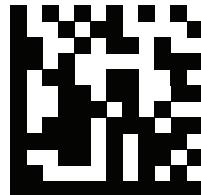


End


RSS Limited Prefix

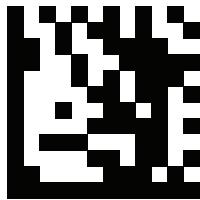


Set

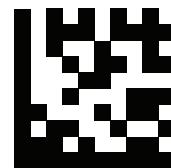

Enable RSS Limited

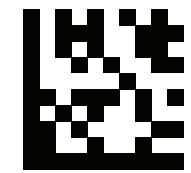


Disable RSS Limited

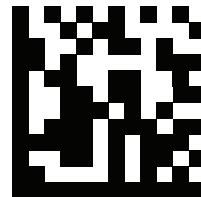


End


Component CC-A Prefix

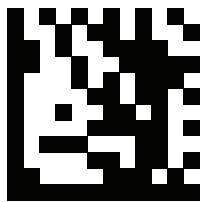


Set

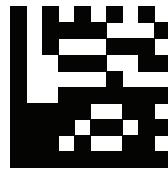

Enable Component CC-A

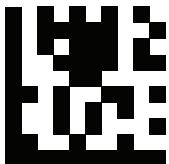


Disable Component CC-A

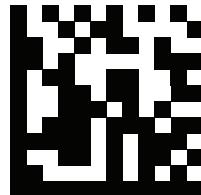


End


Component CC-B Prefix

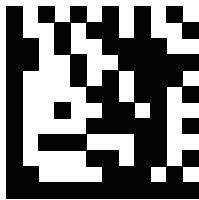


Set

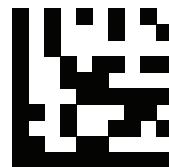

Enable Component CC-B

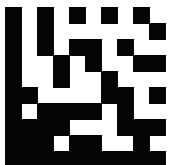


Disable Component CC-B

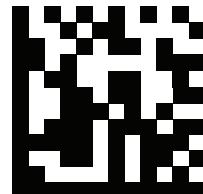


End


Component CC-C Prefix

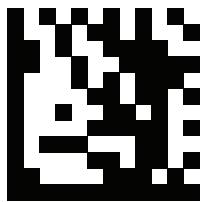


Set

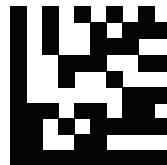


Enable Component CC-C

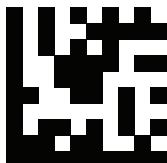


Disable Component CC-C

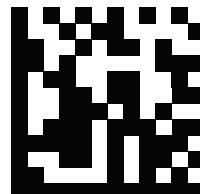


End

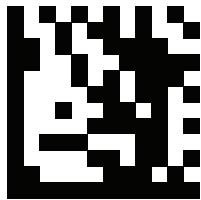PDF 417 Prefix


Set

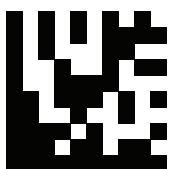

Disable PDF 417

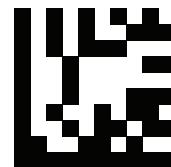


Enable PDF 417

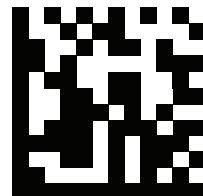


End


Micro PDF 417 Prefix

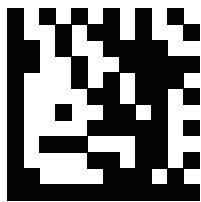


Set

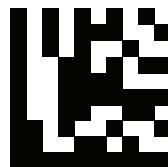

Enable Micro PDF 417

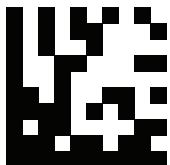


Disable Micro PDF 417

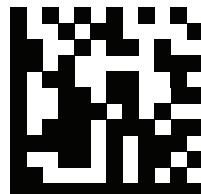


End


Data Matrix Prefix

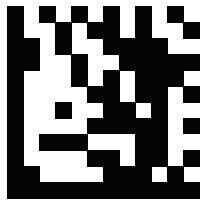


Set

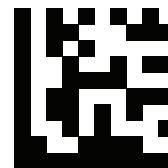

Enable Data Matrix

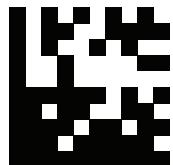


Disable Data Matrix

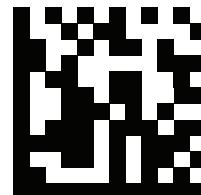


End


QR Prefix

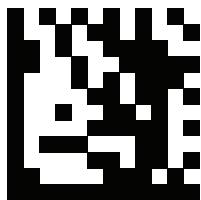


Set

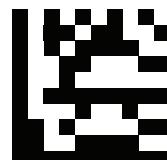

Enable QR Code

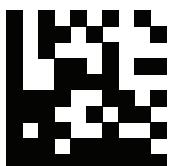


Disable QR Code

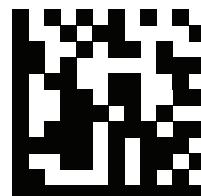


End


Micro QR Prefix

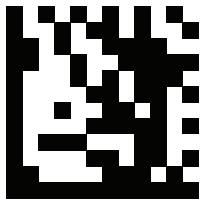


Set

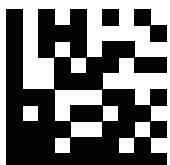

Disable Micro QR

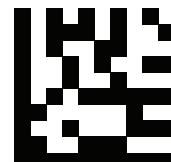


Enable Micro QR

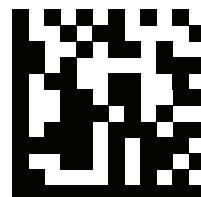


End


Aztec Prefix

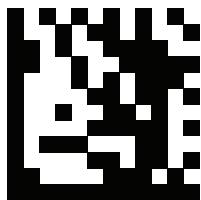


Set

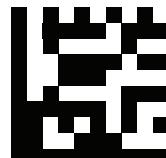


Enable Aztec

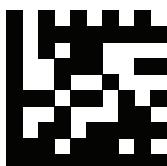


Disable Aztec

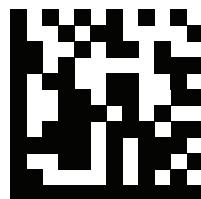


End

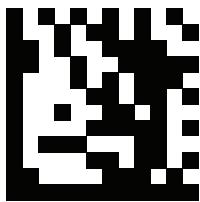MaxiCode Prefix


Set

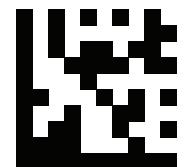

Disable Maxicode

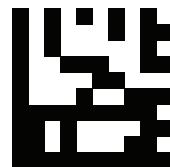

Enable Maxicode

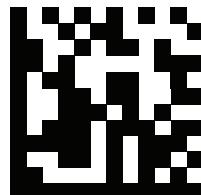

End


Data Editing (Suffix)

Suffix is additional characters that can be sent after the scanned data. Please scan the barcodes in the selection below to set your suffix.


Suffix Set Up Flow

1. Scan Set.
2. Enable barcode type.
3. Scan suffix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.


Ex. If we wish to add “36” as suffix for all barcode type, then follow procedure as below. Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX and [6] as 6.

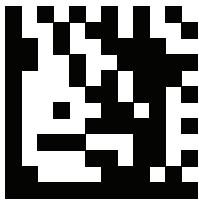All Suffix


Set

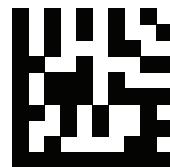

Enable All

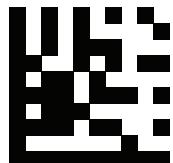


Disable All (Default)

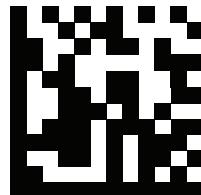


End


UPC-A Suffix

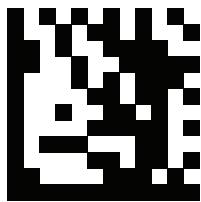


Set

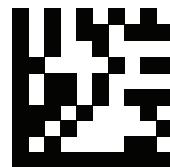


Enable UPC-A

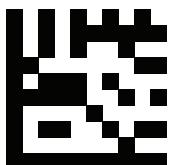


Disable UPC-A

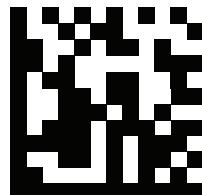


End

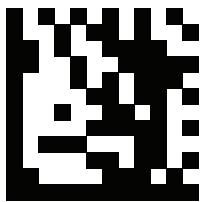UPC-E Suffix


Set

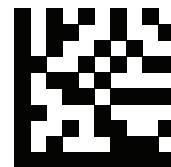

Enable UPC-E

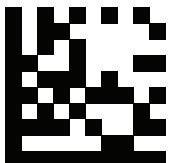


Disable UPC-E

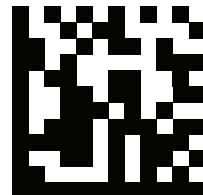


End


EAN 8 Suffix

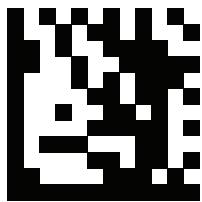


Set

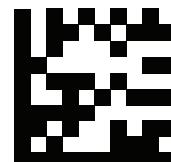


Enable EAN 8

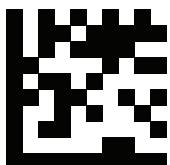


Disable EAN 8

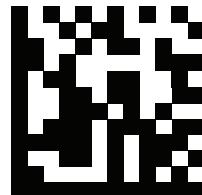


End

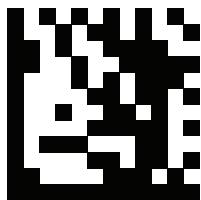EAN 13 Suffix


Set

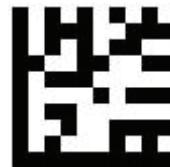

Enable EAN 13

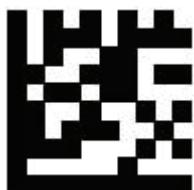


Disable EAN 13

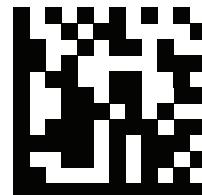


End


Code 128 Suffix

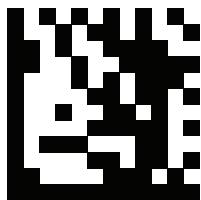


Set

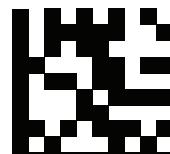

Enable Code 128

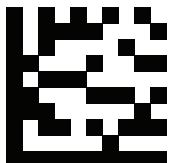


Disable Code 128

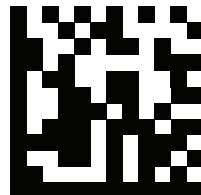


End


Code 39 Suffix

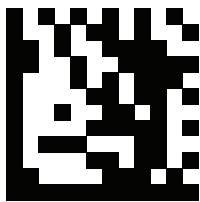


Set

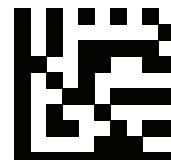

Enable Code 39

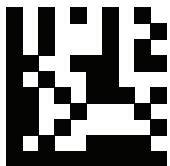


Disable Code 39

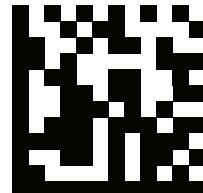


End


Code 93 Suffix

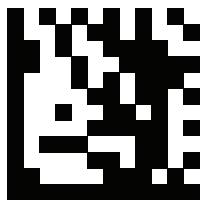


Set

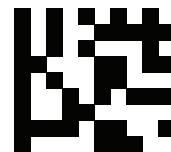

Enable Code 93

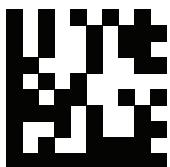


Disable Code 93

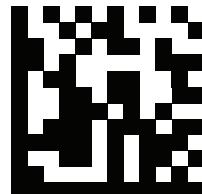


End


Code 32 Suffix

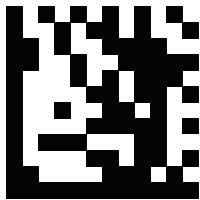


Set

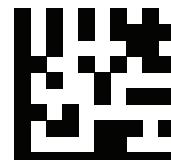

Enable Code 32

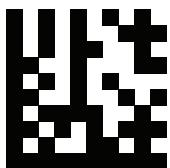


Disable Code 32

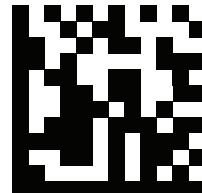


End


Code 11 Suffix

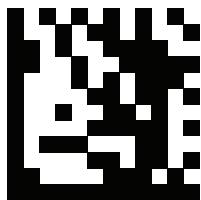


Set

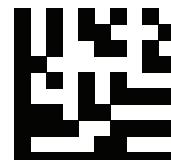

Enable Code 11

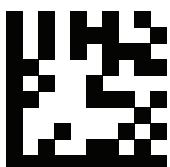


Disable Code 11

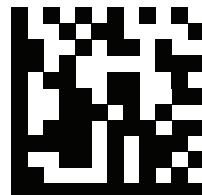


End


Codabar Suffix

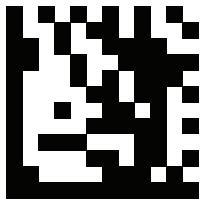


Set

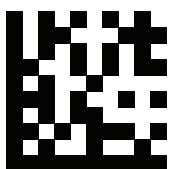

Disable Codabar

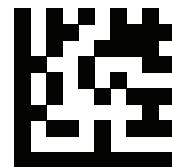


Enable Codabar

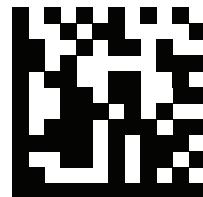


End


Plessey Suffix

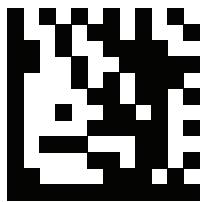


Set

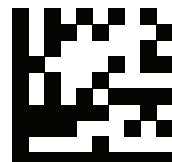


Enable Plessey

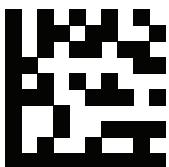


Disable Plessey

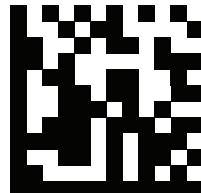


End

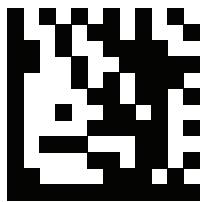MSI Suffix


Set

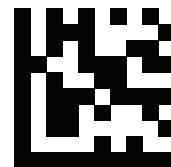

Enable MSI

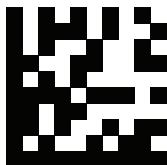


Disable MSI

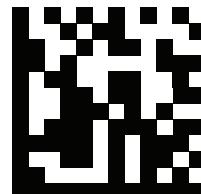


End


Interleaved 2 of 5 Suffix

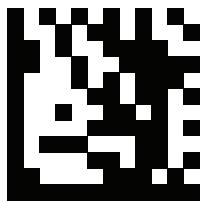


Set

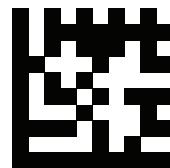


Enable Interleaved 2 of 5

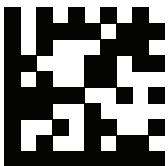


Disable Interleaved 2 of 5

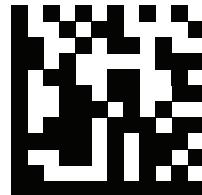


End

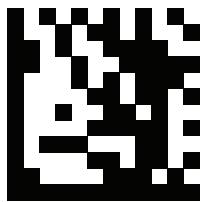IATA 2 of 5 Suffix


Set

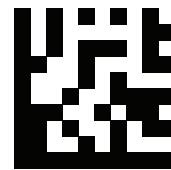

Enable IATA 2 of 5

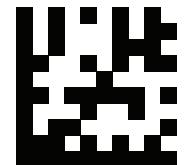


Disable IATA 2 of 5

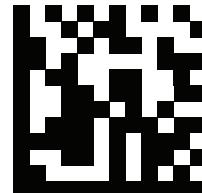


End


Matrix 2 of 5 Suffix

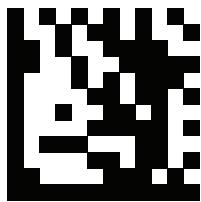


Set

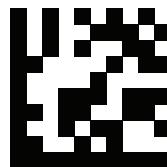


Enable Matrix 2 of 5

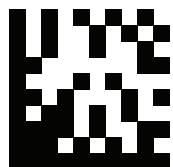


Disable Matrix 2 of 5

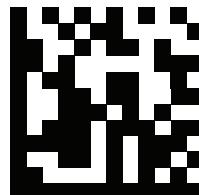


End

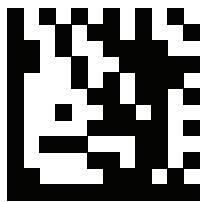Straight 2 of 5 Suffix


Set

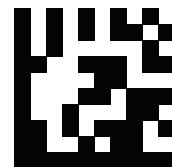

Enable Straight 2 of 5

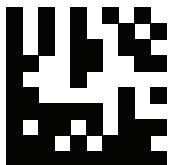


Disable Straight 2 of 5

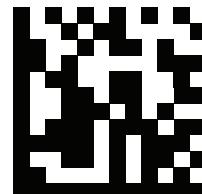


End


RSS 14 Suffix

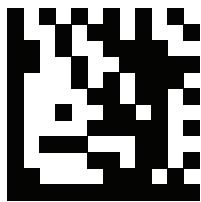


Set

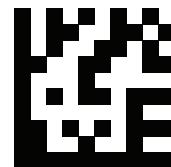

Enable RSS 14

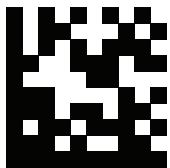


Disable RSS 14

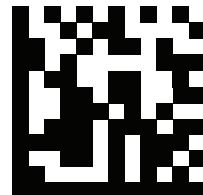


End


RSS Expanded Suffix

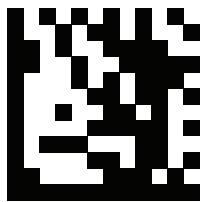


Set

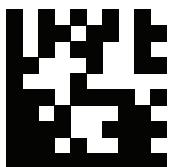

Disable RSS Expanded

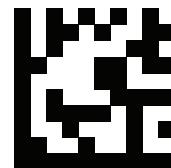


Enable RSS Expanded

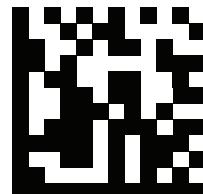


End


RSS Limited Suffix

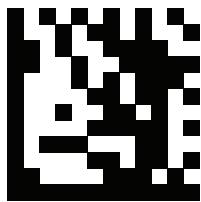


Set

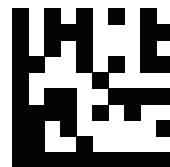

Enable RSS Limited

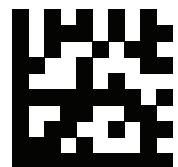


Disable RSS Limited

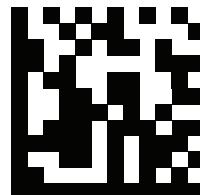


End


Component CC-A Suffix

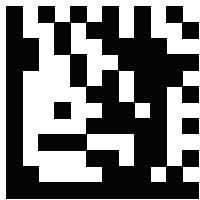


Set

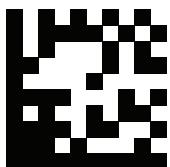

Disable Component CC-A

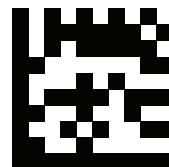


Enable Component CC-A

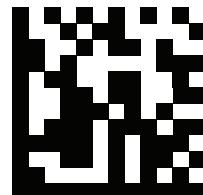


End


Component CC-B Suffix

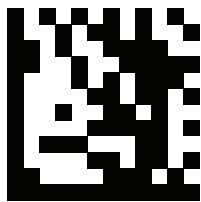


Set

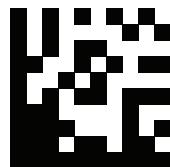


Enable Component CC-B

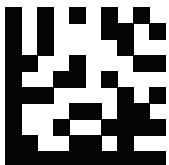


Disable Component CC-B

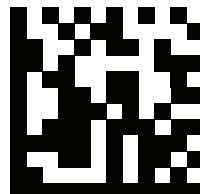


End

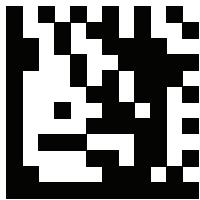Component CC-C Suffix


Set

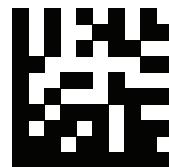

Enable Component CC-C

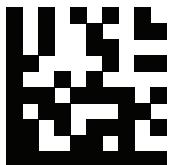


Disable Component CC-C

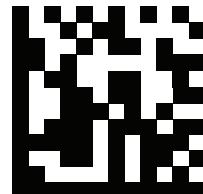


End


PDF-417 Suffix

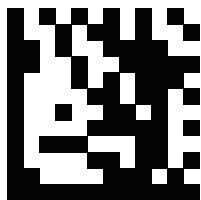


Set

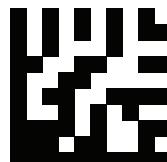

Enable PDF417

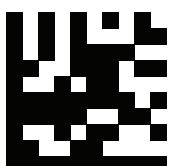


Disable PDF417

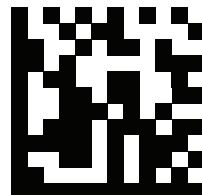


End


Micro PDF-417 Suffix

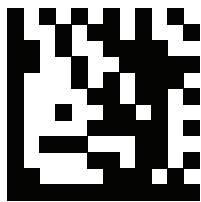


Set

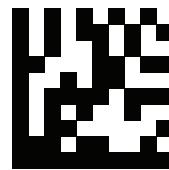

Enable Micro PDF417

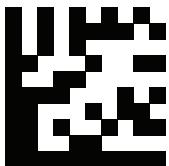


Disable Micro PDF417

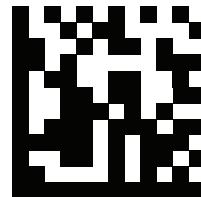


End


Data Matrix Suffix

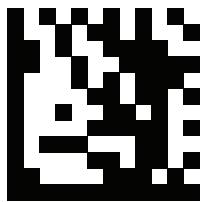


Set

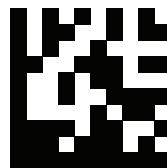

Data Matrix Enable

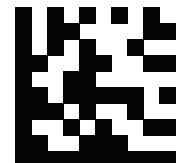


Data Matrix Disable

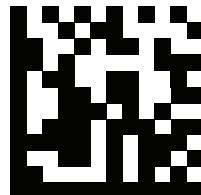


End


QR Code Suffix

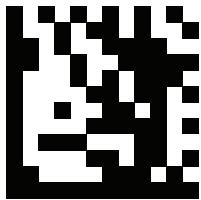


Set

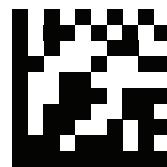

QR Code Enable

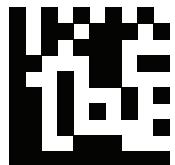


QR Code Disable

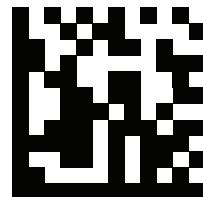


End


Micro QR Suffix

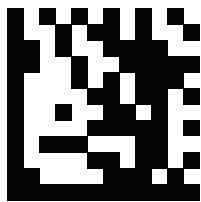


Set

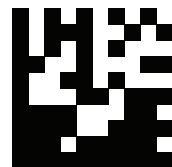

Micro QR Enable

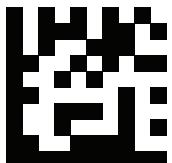


Micro QR Disable

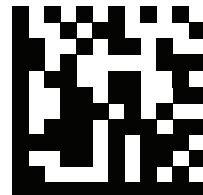


End


Aztec Suffix

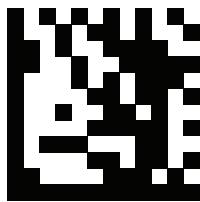


Set

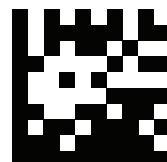

Aztec Enable

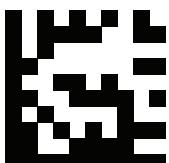


Aztec Disable

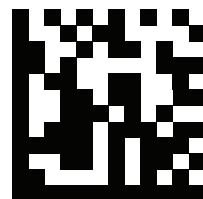


End


MaxiCode Suffix

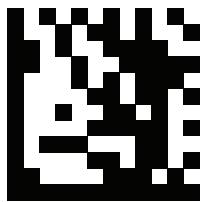


Set

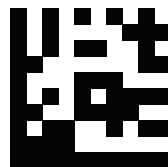

MaxiCode Enable

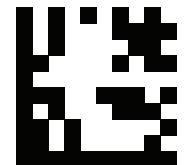

MaxiCode Disable

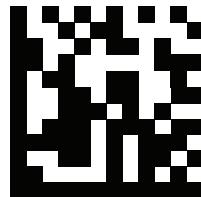

End

Code Settings

Set Lengths for Codes

- One Discrete Length

Select this option to decode the symbol containing a selected length.
Select the length using the numeric bar codes in ASCII Code Table.

Example 1:

To decode Interleaved 2 of 5 symbols with 8 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan 8 in ASCII Code Table
- d. scan End to confirm the setup

Example 2:

To decode Interleaved 2 of 5 symbols with 12 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan scan 1 followed by 2 in ASCII Code Table
- d. scan End to confirm the setup

- Two Discrete Lengths

Select this option to decode the symbol containing either of two selected lengths.
Select lengths using the numeric bar codes in ASCII Code Table.

Example:

To decode Code 128 symbols containing either 8 or 14 characters

- a. scan Set to set up
- b. scan Code 128 Two Discrete Length
- c. scan 0, 8, 1, and then 4 in ASCII Code Table
- d. scan End to confirm the setup

- Length Within Range

Select this option to decode the symbol with a specific length range.
Select lengths using numeric bar codes in ASCII Code Table.

Example:

To decode Codabar symbols containing between 7 and 8 characters,


- a. scan Set to set up
- b. scan Codabar Length Within Range
- c. scan 0, 7, 0, and then 8 in ASCII Code Table
- d. scan End to confirm the setup

- Any Length

Select this option to decode the symbol containing any number of characters within the digital scanner's capability.

Example:

- a. scan Set to set up
- b. scan Matrix 2 of 5 Any Length
- c. scan End to confirm the setup

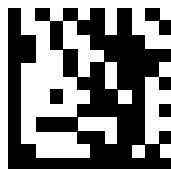Set Lengths for Code 128

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

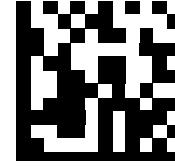

End

Set Lengths for Code 39

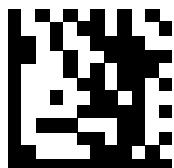


Set



One Discrete Length




Two Discrete Lengths

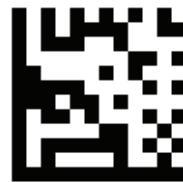

Length Within Range




Any Length (Default)

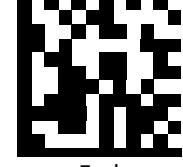


End


Set Lengths for Code 93

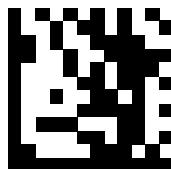


Set

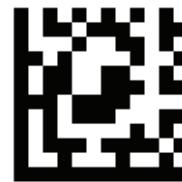


One Discrete Length

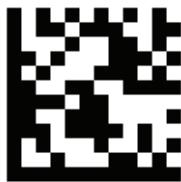


Two Discrete Lengths

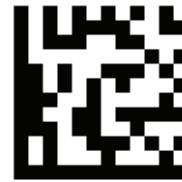

Length Within Range

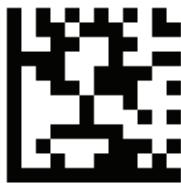


Any Length (Default)

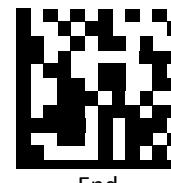


End

Set Lengths for Codabar

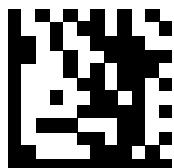


Set

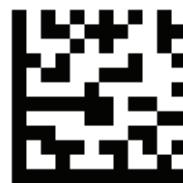

One Discrete Length




Two Discrete Lengths

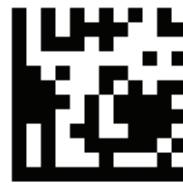


Length Within Range



Any Length (Default)

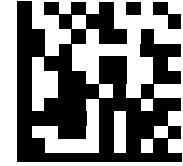

End

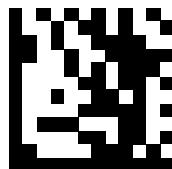Set Lengths for Interleaved 2 of 5

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

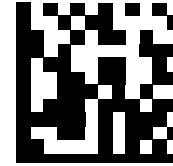

End

Set Lengths for Code 11

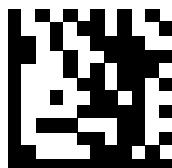


Set



One Discrete Length




Two Discrete Lengths

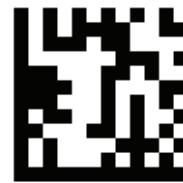

Length Within Range




Any Length (Default)

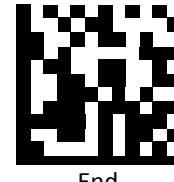


End


Set Lengths for MSI

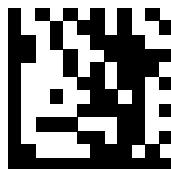

Set

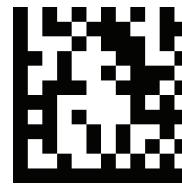

One Discrete Length

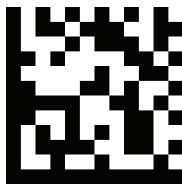


Two Discrete Lengths



Length Within Range




Any Length (Default)

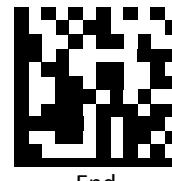

End

Set Lengths for Matrix 2 of 5

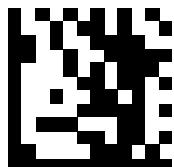

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

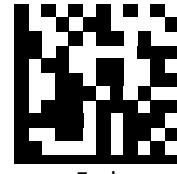

End

Code Identifiers

Scan the following barcodes to set symbology Identifiers.

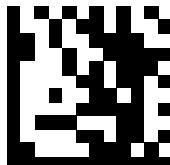


Set




Disable Code ID (Default)



Enable factory standard ID

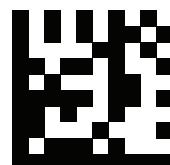

Enable AIM ID

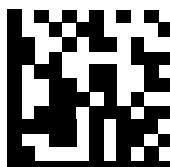


End

Code Identifiers Table

Symbology	Factory Standard	AIM
UPC-A	A	E
UPC-E	E	E
EAN 8	FF	E
EAN 13	F	E
Code 128	K	C
Code 39	M	A
Code 93	L	G
Code 32	M	X
Code 11	O	H
Codabar	N	F
Plessey	P	P
MSI / Plessey	a	M
Interleaved 2 of 5	I	I
IATA 2 of 5	Z	R
Matrix 2 of 5	G	X
Straight 2 of 5	S	S
Pharmacode	H	X
RSS 14	RS	e
RSS Expanded	RX	e
RSS Limited	RL	e
Component CC-A	m	e
Component CC-B	n	e
Component CC-C	i	e
PDF417	r	L
Micro PDF417	s	L
Data Matrix	t	d
QR	u	Q
Micro QR	j	Q
Aztec	e	z
MaxiCode	v	U

Keyboard Caps Lock State

Scan a barcode below to turn Caps on or off.

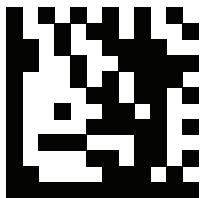


Set



Caps Lock Off (Default)




Caps Lock On

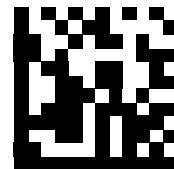

End

Function Key Mapping

Scan the following barcodes to enable or disable Function Key Mapping.

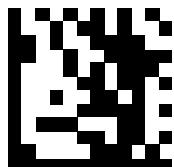


Set



Disable Function Key Mapping (Default)




Enable Function Key Mapping

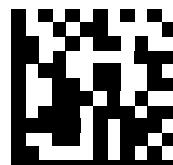


End

ASCII Code


For parameters requiring specific numeric values, scan the appropriately numbered barcode(s).

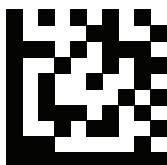


Space

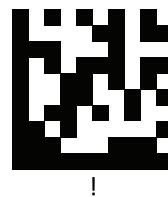


!

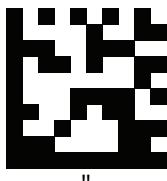


"

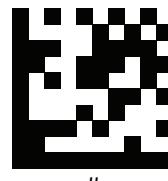


#

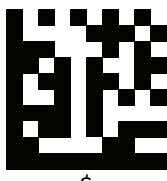


\$

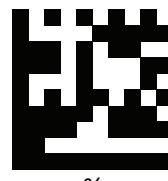


%

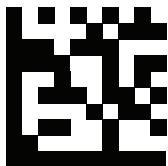


&

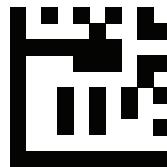


,

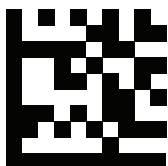


(

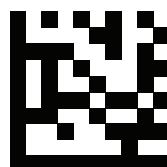







)

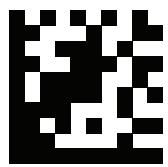


*

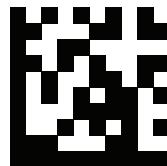


+

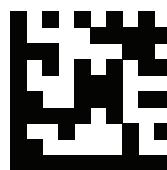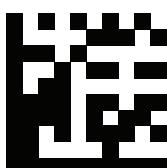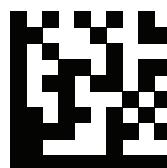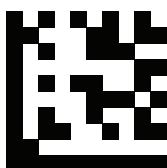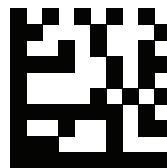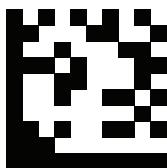


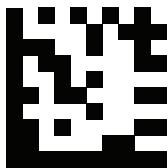


<

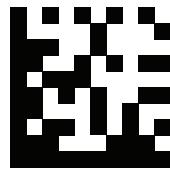


=

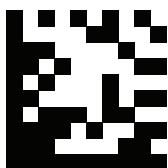


>

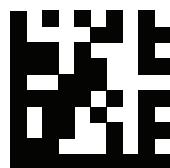


?

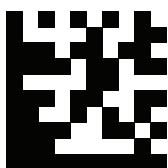


@

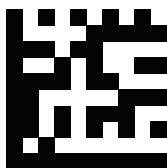


0

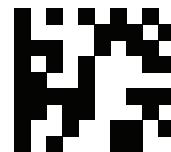


1

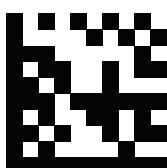


2

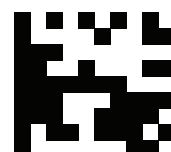


3

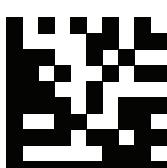


4

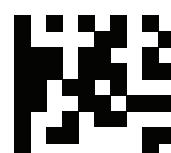


5

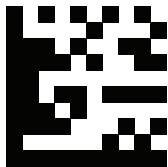


6

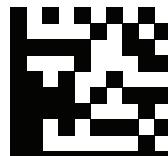


7

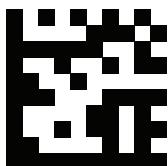

8

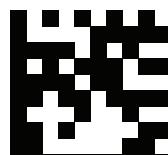


9

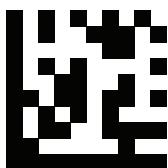


A

(Function Key
Mapping: Ctrl+a)

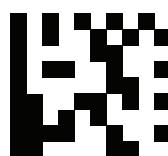


B

(Function Key
Mapping: Ctrl+b)

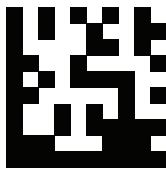


C

(Function Key
Mapping: Ctrl+c)

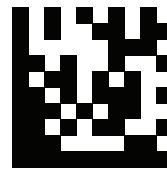


D

(Function Key
Mapping: Ctrl+d)

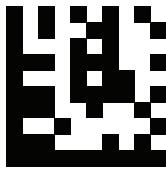


E

(Function Key
Mapping: Ctrl+e)

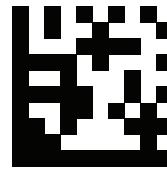


F

(Function Key
Mapping: Ctrl+f)

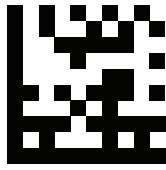


G

(Function Key
Mapping: Ctrl+g)

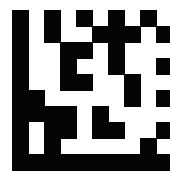


H

(Function Key
Mapping: Ctrl+h)

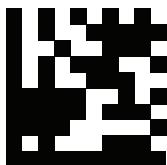


I

(Function Key
Mapping: Ctrl+i)

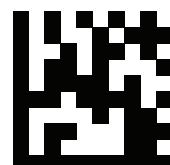


J

(Function Key
Mapping: Ctrl+j)

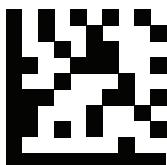


K

(Function Key
Mapping: Ctrl+k)

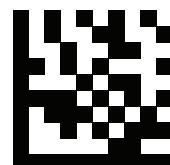


L


(Function Key
Mapping: Ctrl+l)

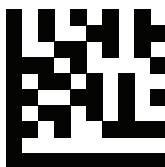


M
(Function Key
Mapping: Ctrl+m)

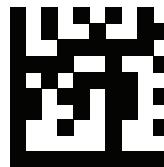


N
(Function Key
Mapping: Ctrl+n)

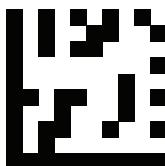


O
(Function Key
Mapping: Ctrl+o)

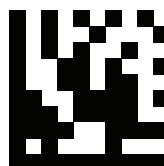

P
(Function Key
Mapping: Ctrl+p)

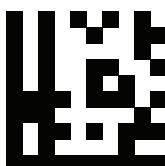


Q
(Function Key
Mapping: Ctrl+q)

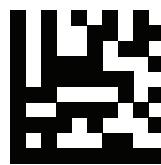


R

(Function Key
Mapping: Ctrl+r)

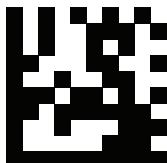


S

(Function Key
Mapping: Ctrl+s)

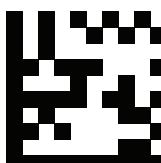


T

(Function Key
Mapping: Ctrl+t)

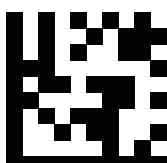


U

(Function Key
Mapping: Ctrl+u)

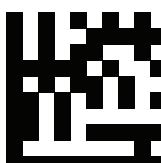


V


(Function Key
Mapping: Ctrl+v)

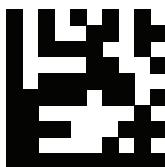


W
(Function Key
Mapping: Ctrl+w)

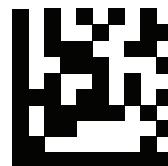


X
(Function Key
Mapping: Ctrl+x)

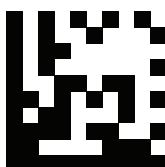


Y
(Function Key
Mapping: Ctrl+y)

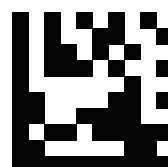


Z
(Function Key
Mapping: Ctrl+z)

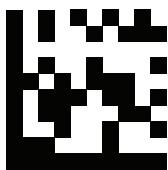


a

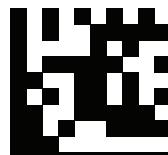


b

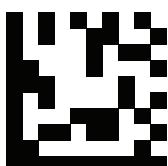


c

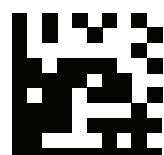


d

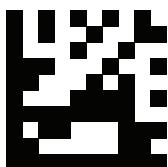


e

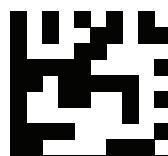


f

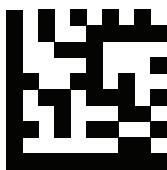


g

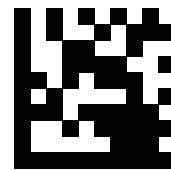


h

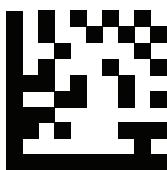


i

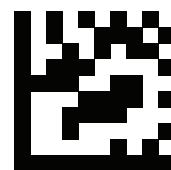


j

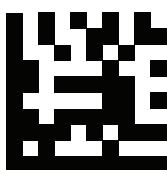


k

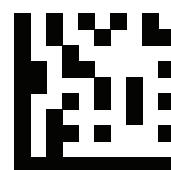


l

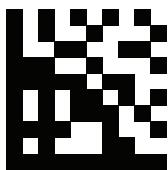


m

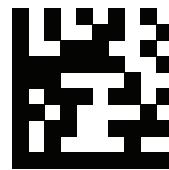


n

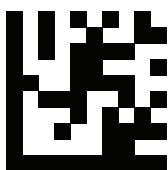


o

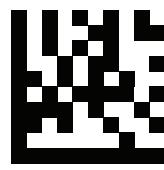


p

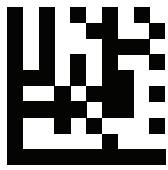


q

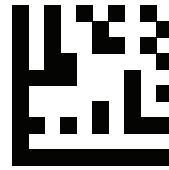


r

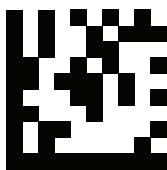


S

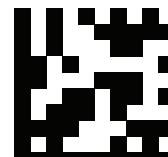


T

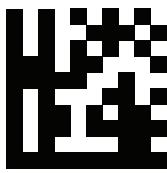


U

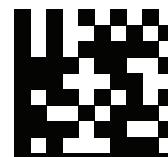


V

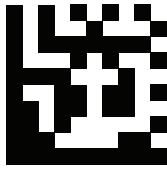


W

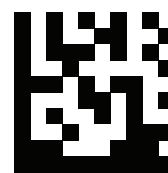

X

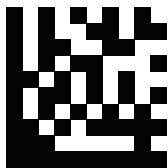

y

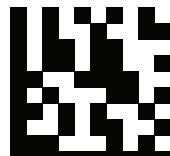

z



Insert



Delete



Home



End



Up arrow



Down arrow



Left arrow



Right arrow



Tab



Backspace




Shift



ESC



Page up

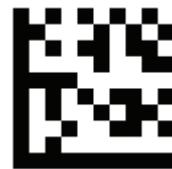

Page down



F1



F2



F3



F4



F5



F6




F7



F8



F9

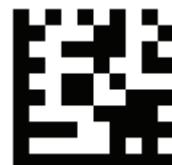

F10



F11




F12

USB Virtual COM Driver Installing

If you use virtual COM port emulation, follow the steps below to start using the scanner.

1. Execute the driver (ZEBEX VCOM Driver Installation.exe).
2. Connect the scanner USB cable to the host computer.
3. Set the interface to USB Virtual COM Port.

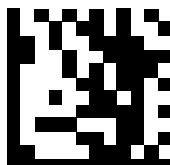


Set



USB Virtual COM Port

*Driver required

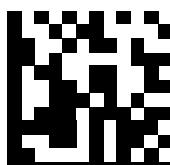

End

4. On the computer, check Device Manager to see if the computer successfully detects the scanner as “Barcode Scanner USB-COM device.” (The COM port number would vary depending on different hardware environment).




JavaPOS Setting

This section provides the programming barcodes for setting JavaPOS and the flow of installing JavaPOS driver.

JavaPOS

Scan the following barcodes to enable or disable JavaPOS.

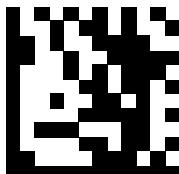


Set



JPOS Enable



JPOS Disable (Default)

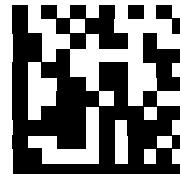

End

JavaPOS Version

Our JavaPOS driver now is compatible with JavaPOS1.7.

Install the Java2 Runtime Environment

The JRE is Java's virtual machine that allows for applications to run on the host computer. To be able to run the JavaPOS application, you need a 1.7 version JRE. Ignore the following steps if you already have a JavaPOS1.7 or a later version in your host computer.

- Go to <http://java.sun.com>, and select this version of Java Runtime Environment.
- Install the program following the instructions.

Install the Service Object and JavaPOS files

In the “\Driver” folder, there are two files: ZbtJavapos.jar and jpos.xml. Please include ZbtJavapos.jar at your CLASSPATH and also copy the related “JPosEntry” option from the jpos.xml to your application’s jpos.xml.

How to use RS232 scanner with JavaPOS Driver

Install the Java RXTXcomm API


In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32.
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

Use barcodes to configure the scanner

JavaPOS configuration barcodes:


Set

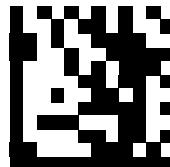


RS-232



JPOS Enable

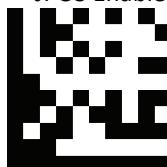

End

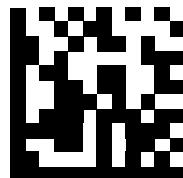

Running the JavaPOS Test utility

Please run the test application POStest.sh to evaluate your installation.

How to use JavaPOS driver at your application

1. Add “ZbtJavaPos.jar” from the “\Driver” folder to the CLASSPATH and copy the related “JPosEntry” option from the “**jpos.xml**”.
2. Modify the jpos.xml based on your COM Port
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific
properties i.e. RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="115200" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value=" COM1" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>

</JposEntries>
```

Note: The default baud rate : 2D scanner =115200


How to use USB scanner with JavaPOS Driver

Configuring the Scanner via barcodes:

- Scan the barcodes in the sequence below to configure the scanner to usb-serial mode.

JavaPOS configuration bar codes:


Set

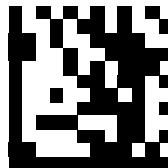


USB Virtual COM Port



JPOS Enable

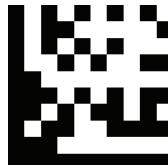

End

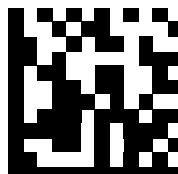

Install the Java RXTXcomm API

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

Running the JavaPOS Test utility

Please run the test application to evaluate your installation.

How to Use JavaPOS Driver at your application

1. In the “\Driver” folder, copy “**ZbtJavaPos.jar**” and “**jpos.xml**” to your work folder.
2. Modify the jpos.xml .
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
          "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific properties i.e.
RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="115200" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value="COM56" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
          "jpos/res/jcl.dtd">
<JposEntries>
</JposEntries>
```